




CHANDELIER 6861- ___ ___ H TRIM DIAGRAM

(Finish Option)

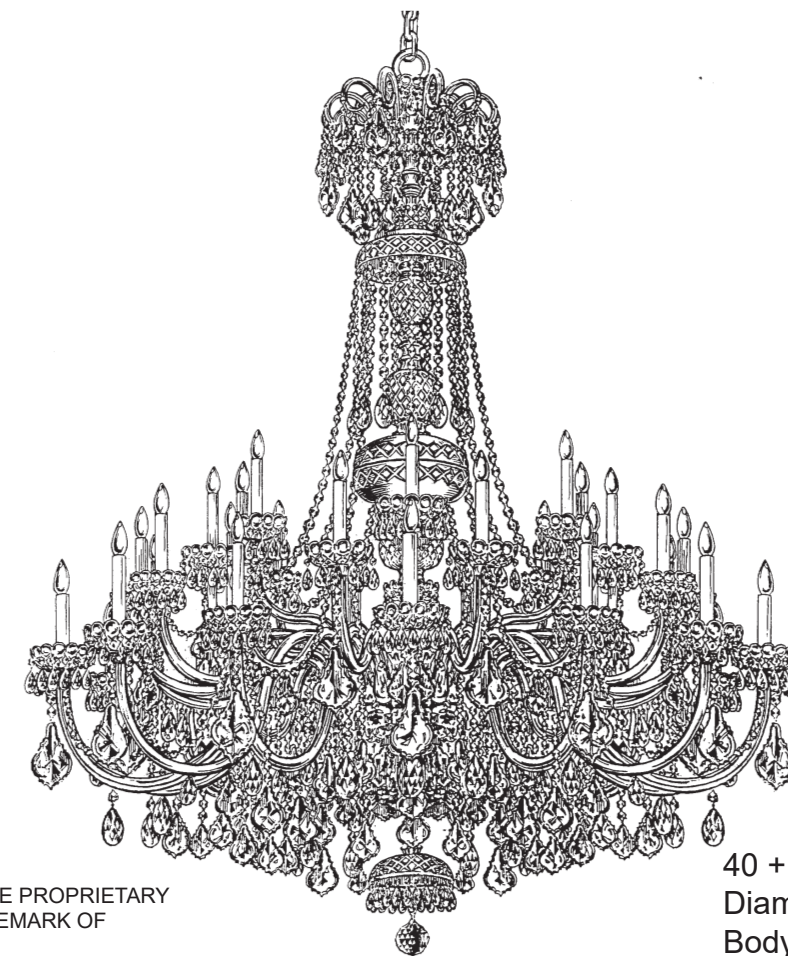

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF W SCHONBEK LLC.

40 + 5 Lights
Diameter: 60"
Body Length: 77"



CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 200 pounds.

BULBS: (5) Candle shaped candelabra base B8 bulbs, recommend 25 watts for best appearance.
(40) Candle shaped candelabra base B10 bulbs, recommend 25 watts for best appearance.
60 - Watts Maximum

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

**Follow steps in exact order
Save this trim diagram for future reference**


1

IMPORTANT

Please record the following information for future service.

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.

Instructions for electrician STEPS 2 - 7

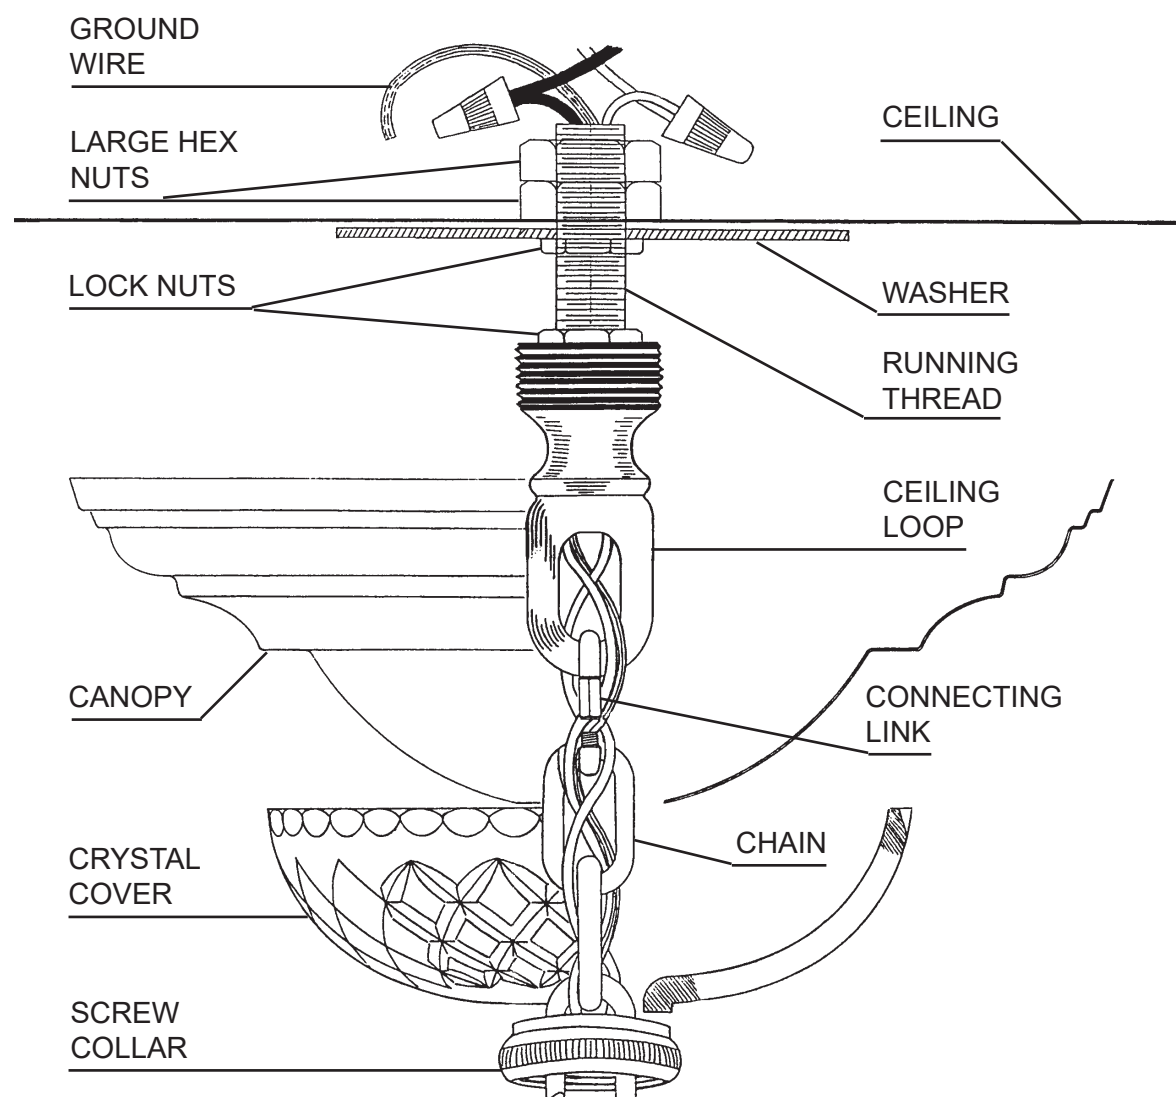

2 MAKE SURE POWER IS DISCONNECTED!!

3 Attach washer to supporting member in ceiling sufficient to support weight of fixture.

4 Slip screw collar, crystal cover and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.


5 Insert stem wire through chain and ceiling loop. Connect wires. Fixture **MUST** be grounded.

6 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

7 Attach canopy to ceiling with screw collar.

FRAGILE:

CAUTION: Glass parts are fragile. To avoid breakage use care when assembling or cleaning.

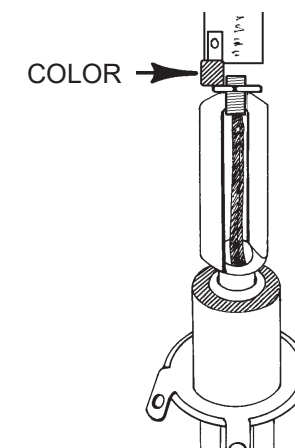

WHEN ORDERING REPLACEMENT ARM(S):

- | Give arm number from trim diagram
- | Give color code from the arm itself

MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS, ABRASIVES OR AEROSOL SPRAYS BE USED.


While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate jewelry... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

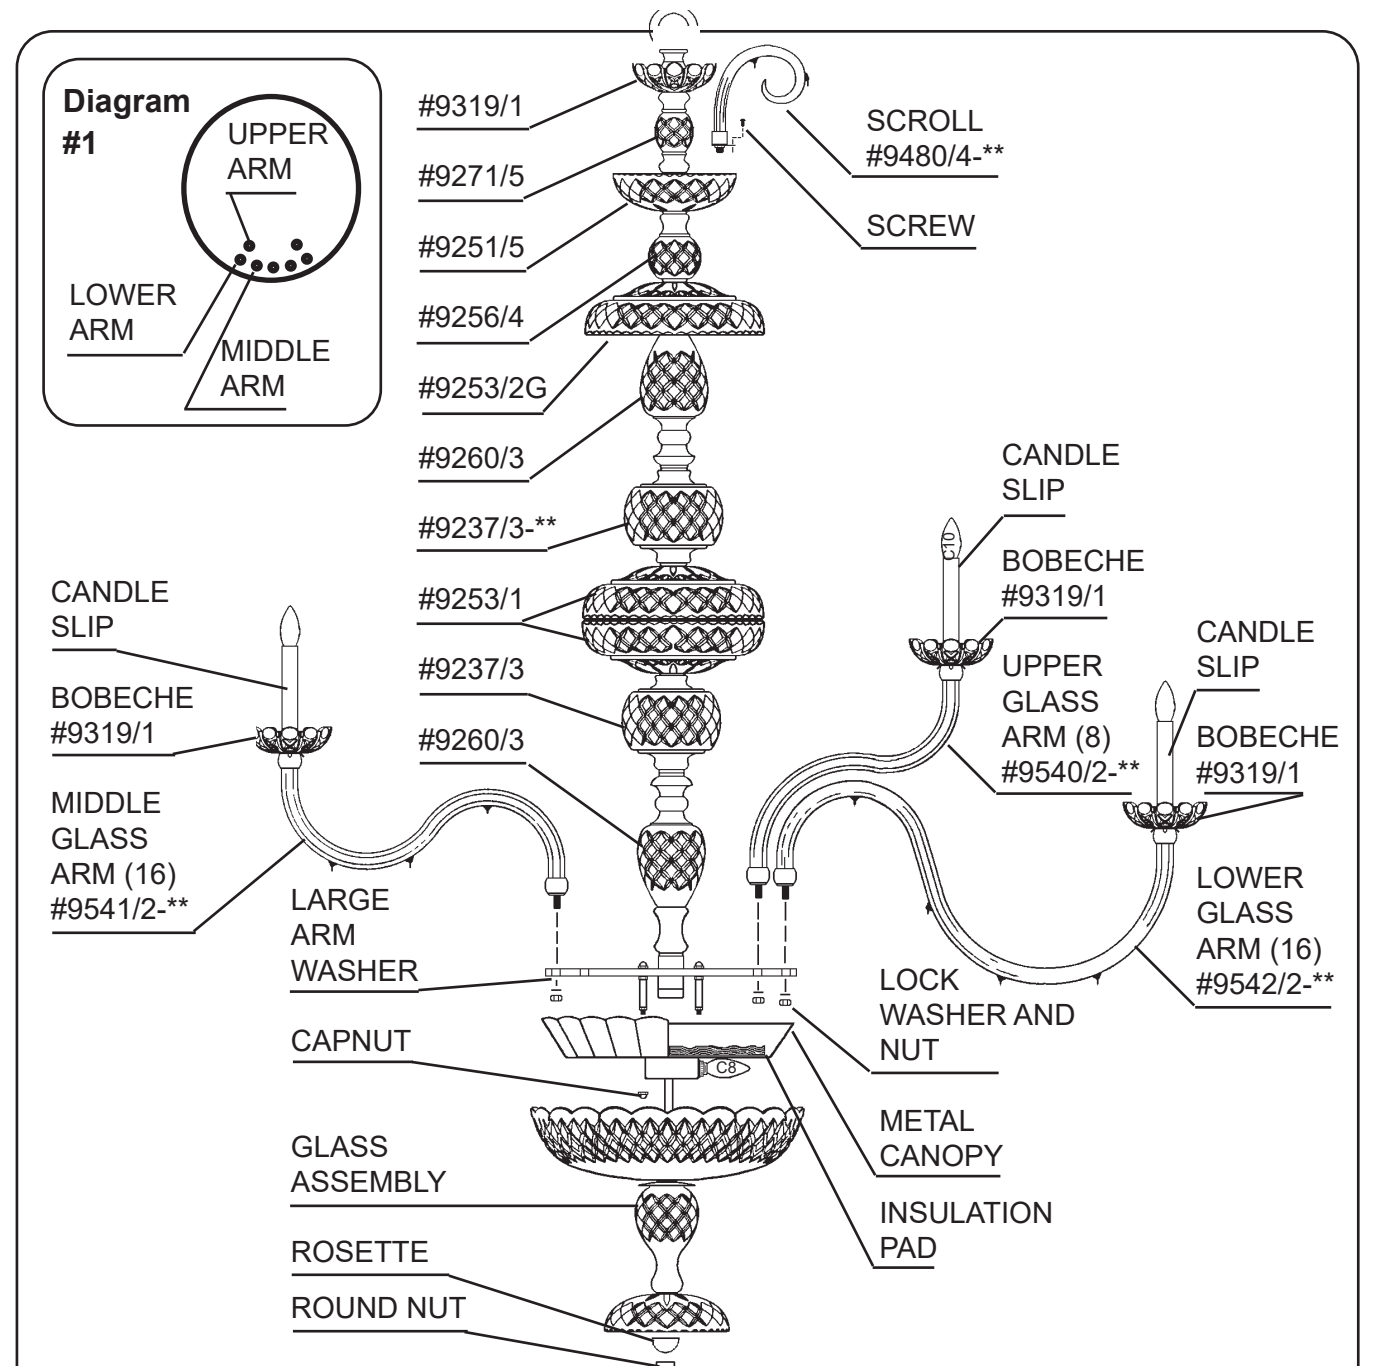

8 Install scrolls into washer with screws provided. Install arms into large arm washer. Line up holes in arms with dimple in washer. Use lock washer and nut to secure arms in place. **NOTE: Place 8 upper arms into inside diameter holes and ALTERNATE 16 middle and lower arms in outside diameter holes. For best appearance line-up lower arms with upper arms. See Diagram #1.**


9 Connect bare ground wires in each arm to bare ground wire in center column. Use electrical tape to secure wire nuts. **NO MORE THAN 5 - WIRES PER WIRE NUT.** Sufficient quantities of jumper wires and wire nuts are provided.

10 Connect white arm wires to neutral column wire (ribbed or marked is neutral). Connect black arm wires to power wire in column. Carefully press wires as close as possible to the underside of washer. Slide metal canopy with insulation pad to washer, attach with capnuts to threaded studs. Install 5 - bulbs and attach glass assembly with rosette and round nut provided.

11 Install bobeches and bulbs, connect power and test the fixture **BEFORE** trimming. If any of the bulbs do **NOT** light - **DISCONNECT POWER.** Double check the wire connections.

Instructions for crystal trimming STEPS 12 - 27

- 12** Hook Crystal "A" into bracket on upper column bobèche.
- 13** Hook Crystal "B" into the inside ring on glass scroll.
- 14** Hook Crystal "C" into the outside ring on glass scroll. Hook Chain "D" into the loops on Crystal "C". Chain "D" are swagged between Crystal "C".
- 15** Hook Chain "E" into every other ring on the center column bobèche. Hook other end into the back tab under bobèche on upper arm.
- 16** Hook Crystal "F" into every other ring on the center column bobèche. Crystal "F" hangs between two upper arm.
- 17** Screw Crystal Ball "H" onto the bottom of chandelier. Tighten setscrew with allen wrench provided to lock ball into position.
- 18** Hook Crystal Chain "J" (large crystal at top) into ring on the large lower body bobèche. Hook other end of Crystal Chain "J" (small crystal at bottom) into the lower column washer.
- 19** Hook Crystal "A1" into rings on the lower column bobèche.
- 20** Hook Crystal "G" into front tab under upper arm bobèche.
- 21** Hook Crystal "L1" into loops on the large lower body bobèche.
- 22** Hook Crystal "K", "L2" & "M" of each into rings on middle arm.
- 23** Hook Crystal "N" into front tab under middle arm bobèche.
- 24** Hook Crystal "O", "P1", "Q" & "R" of each into the rings on lower arm.
- 25** Hook Crystal "S" into front tab under lower arm bobèche.
- 26** Hook Crystal Chain "T" into side tab under lower arm bobèche. Hook other end of Chain "T" into side tab under middle arm bobèche.
NOTE: Crystal Chain "T" swags between lower and middle arms.
- 27** Every bobèche is trimmed with Crystal "A", one suspended from every bracket.

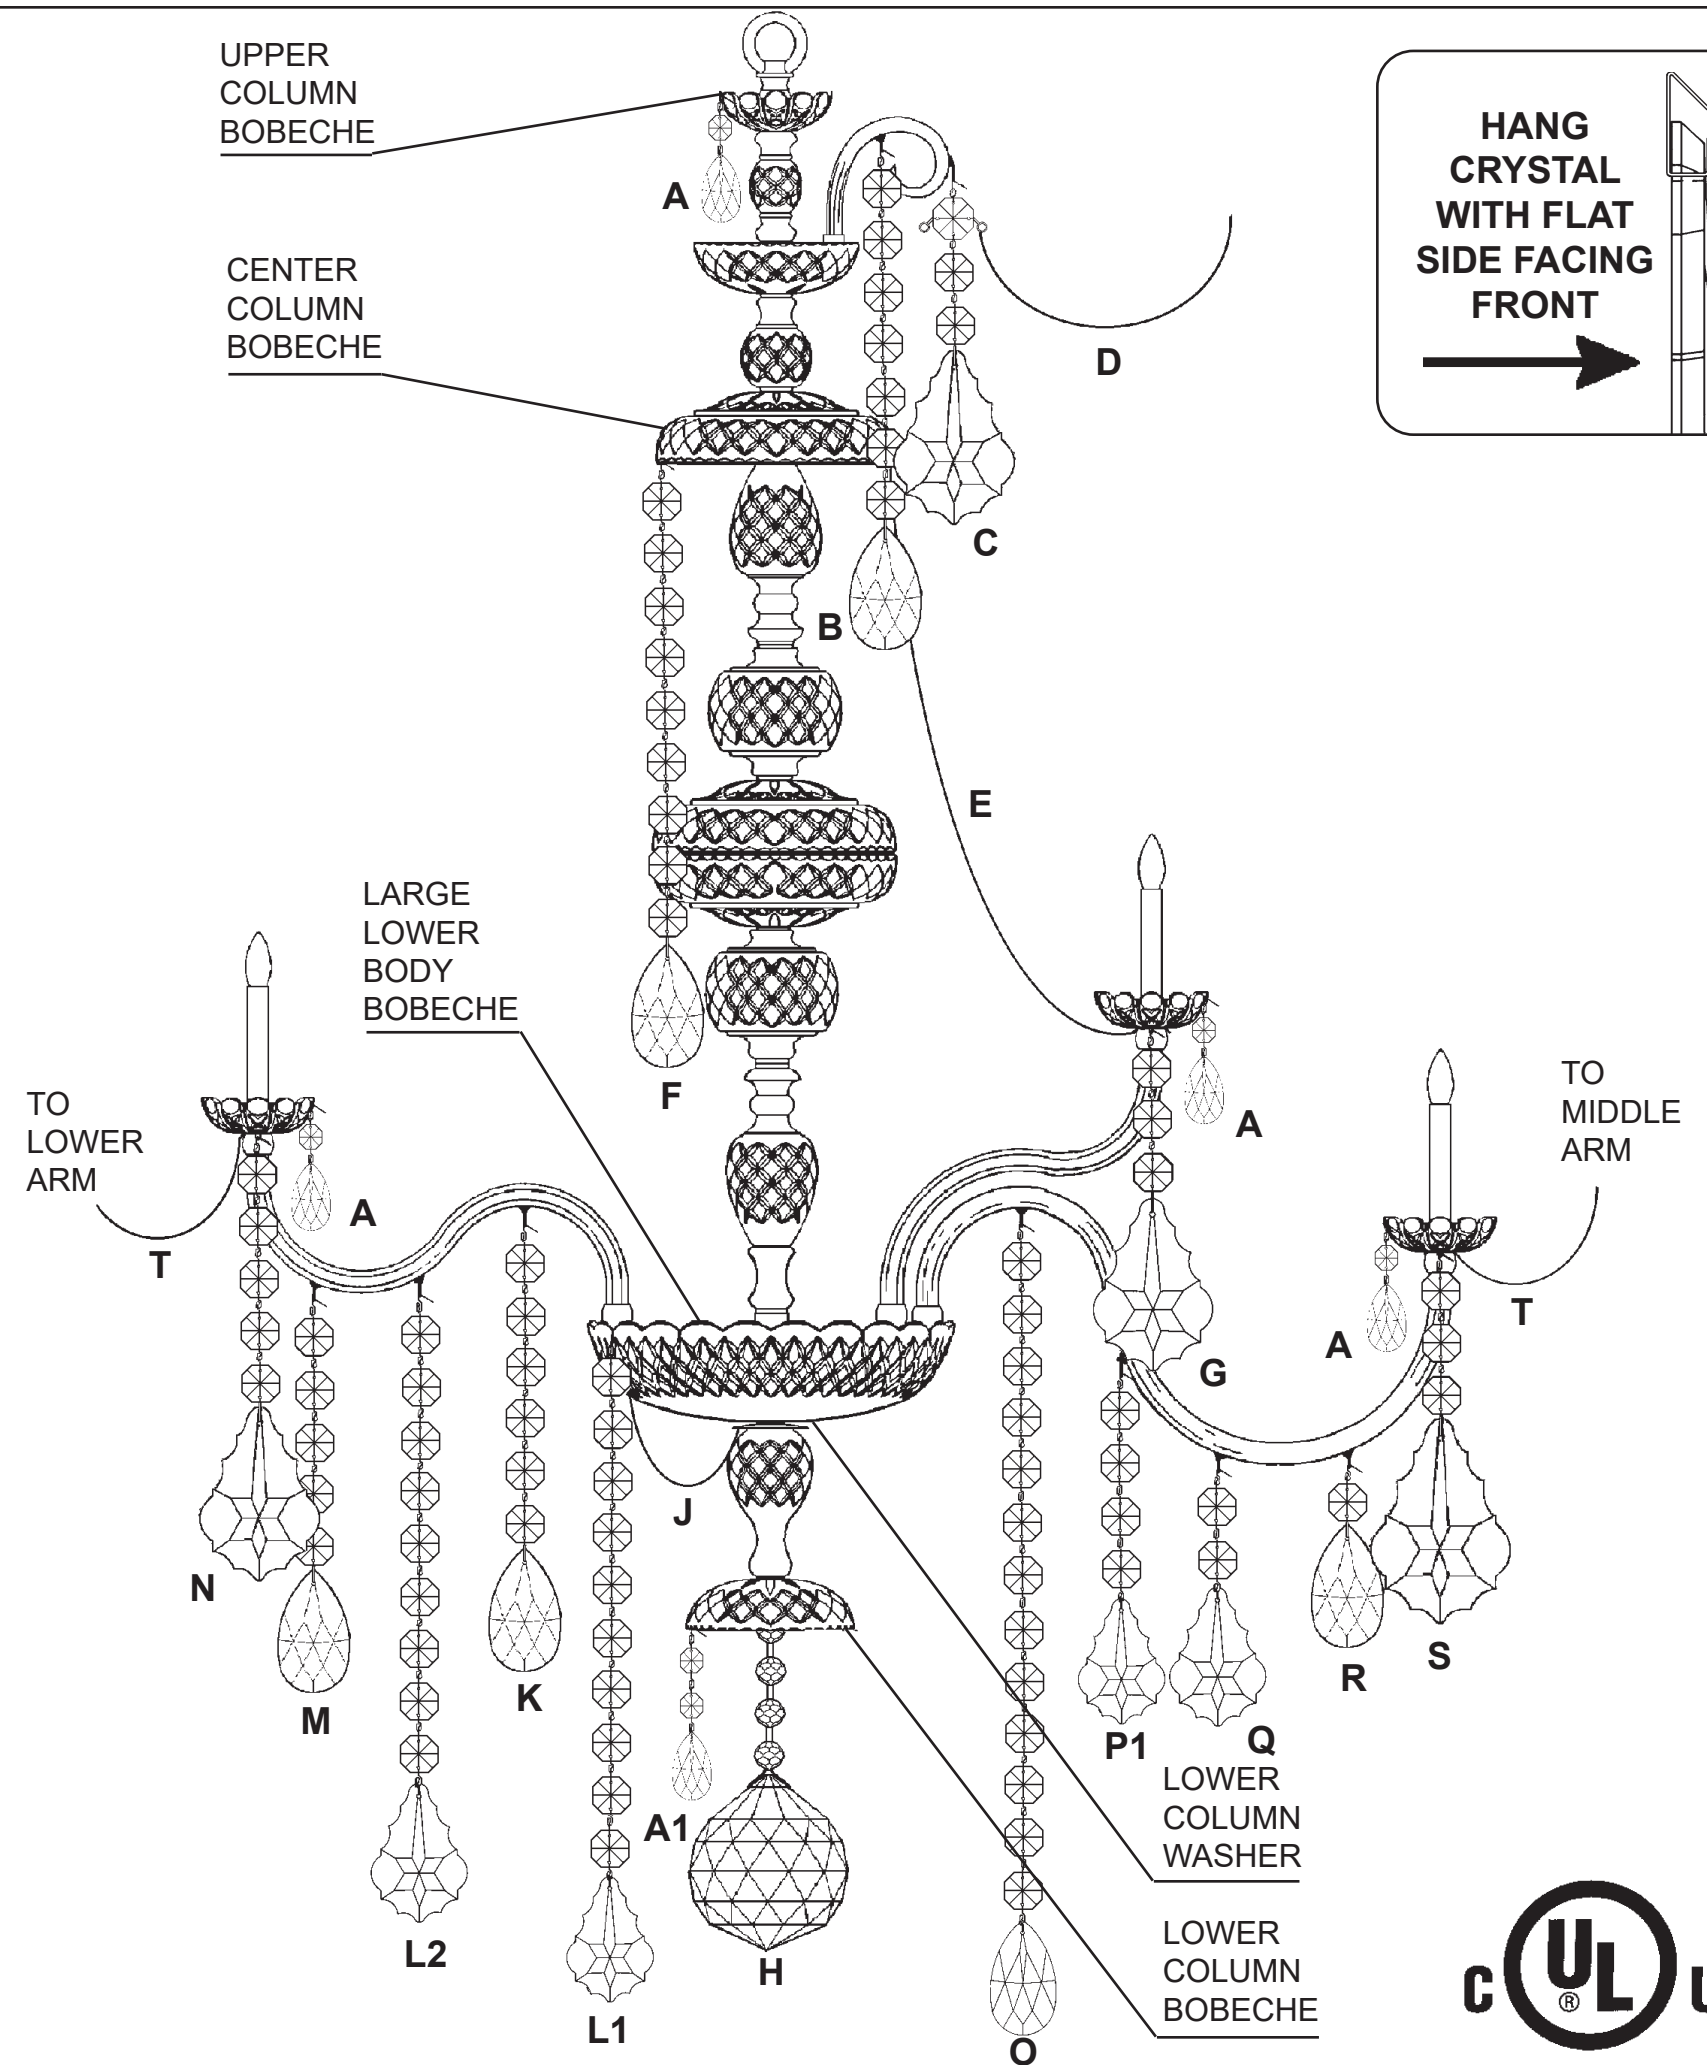



CHANDELIER 6861-___R TRIM DIAGRAM

(Finish Option)



THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF W SCHONBEK LLC.

40 + 5 Lights
Diameter: 60"
Body Length: 77"



CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 200 pounds.

BULBS: (5) Candle shaped candelabra base B8 bulbs, recommend 25 watts for best appearance.

(40) Candle shaped candelabra base B10 bulbs, recommend 25 watts for best appearance.

60 - Watts Maximum


WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

**Follow steps in exact order
Save this trim diagram for future reference**

1 **IMPORTANT**
Please record the following information for future service.

CODE	#	_____	Four-digit number on outside of carton.
PACKER	#	_____	See crystal package label.
ORDER	#	_____	See crystal package label.

Instructions for electrician STEPS 2 - 7

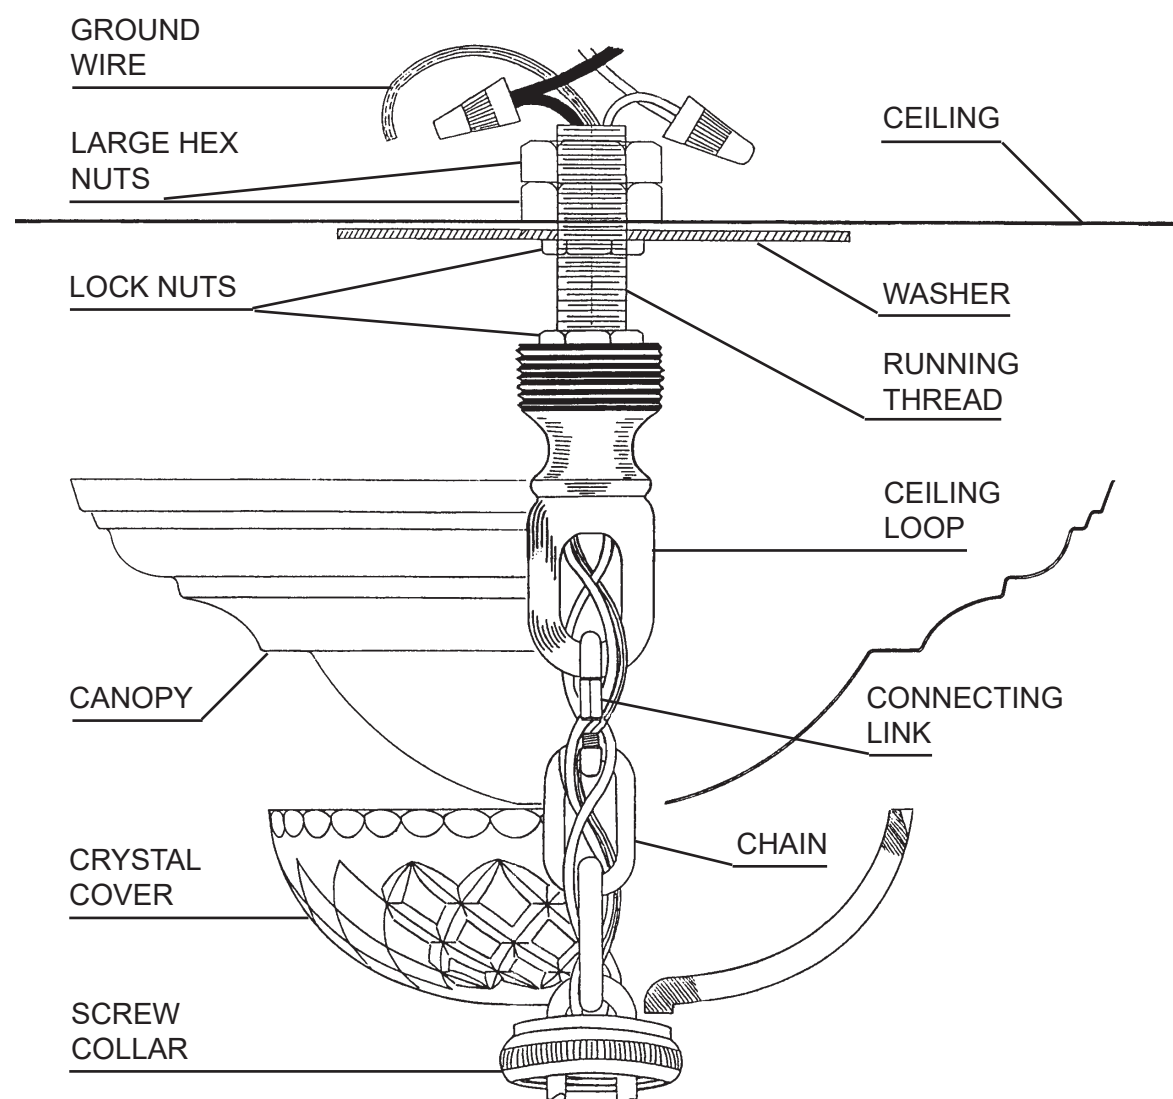

2 MAKE SURE POWER IS DISCONNECTED!!

3 Attach washer to supporting member in ceiling sufficient to support weight of fixture.

4 Slip screw collar, crystal cover and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.


5 Insert stem wire through chain and ceiling loop. Connect wires. Fixture **MUST** be grounded.

6 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

7 Attach canopy to ceiling with screw collar.

FRAGILE:

CAUTION: Glass parts are fragile. To avoid breakage use care when assembling or cleaning.

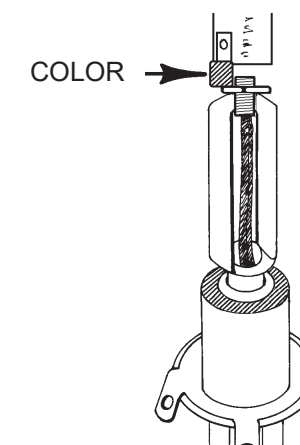

WHEN ORDERING REPLACEMENT ARM(S):

- | Give arm number from trim diagram
- | Give color code from the arm itself

MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS, ABRASIVES OR AEROSOL SPRAYS BE USED.


While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate jewelry... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

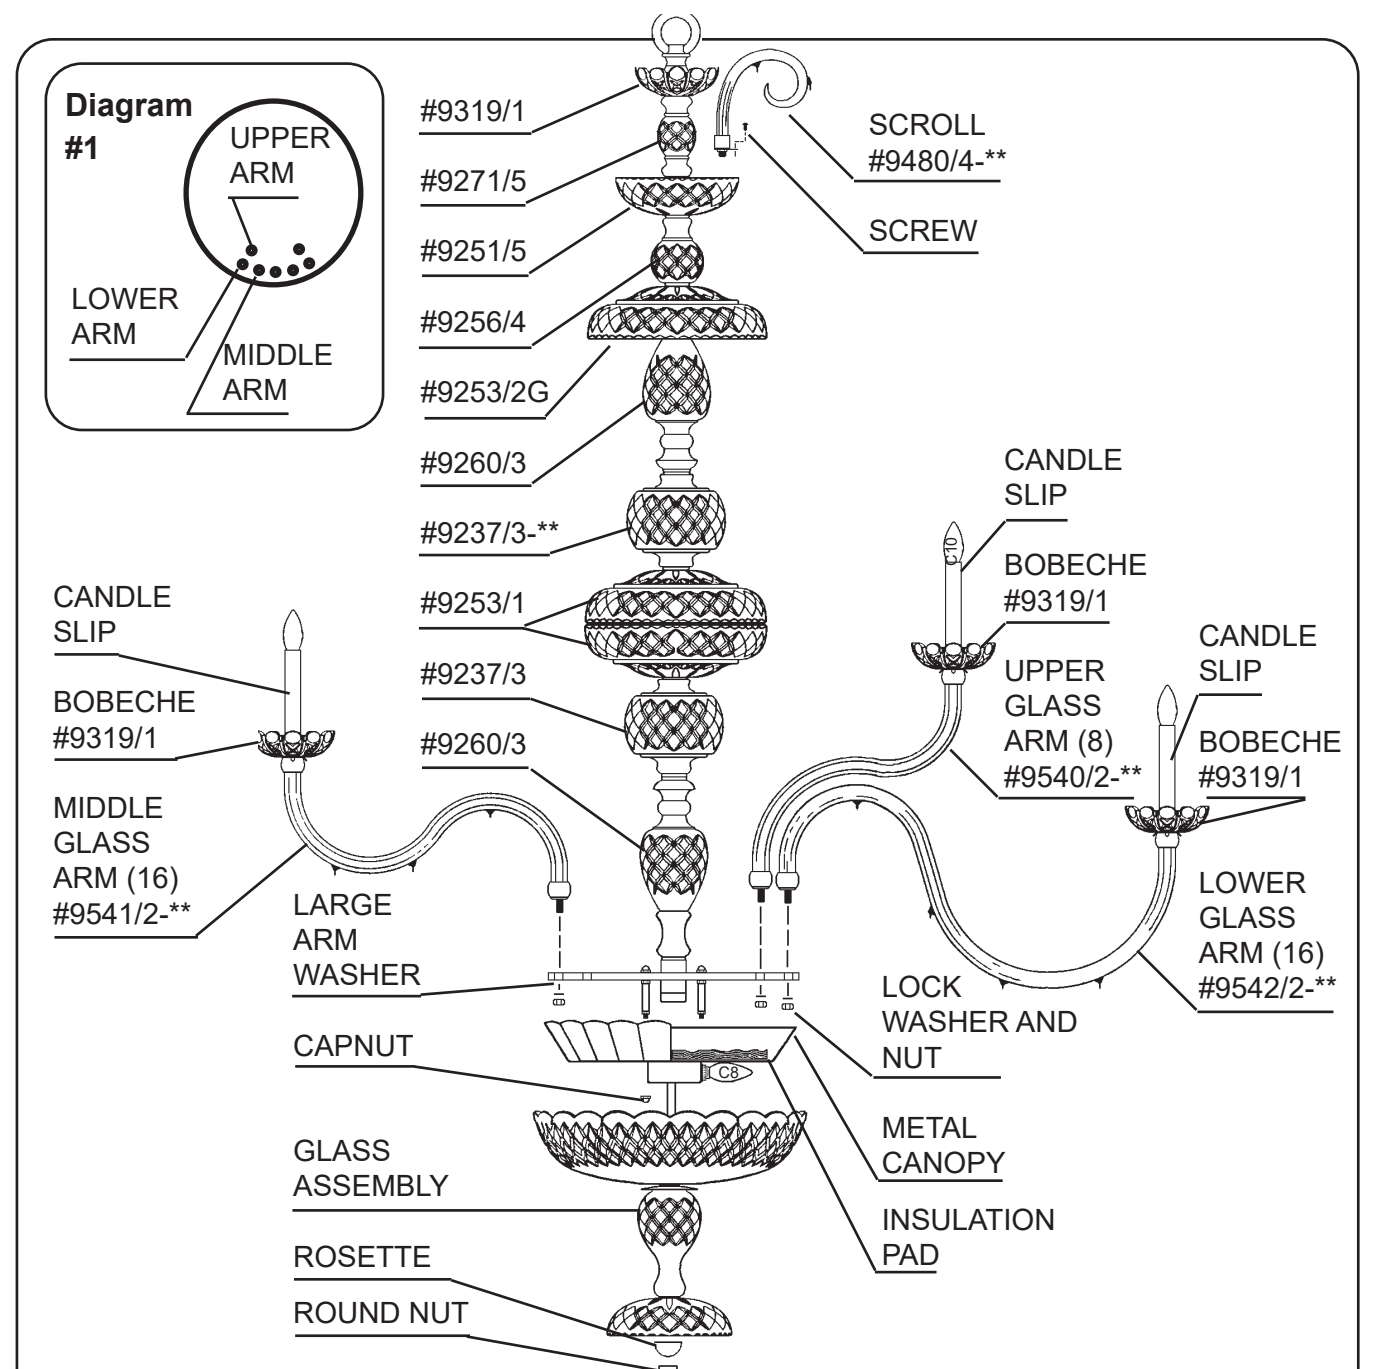

8 Install scrolls into washer with screws provided. Install arms into large arm washer. Line up holes in arms with dimple in washer. Use lock washer and nut to secure arms in place. **NOTE: Place 8 upper arms into inside diameter holes and ALTERNATE 16 middle and lower arms in outside diameter holes. For best appearance line-up lower arms with upper arms. See Diagram #1.**


9 Connect bare ground wires in each arm to bare ground wire in center column. Use electrical tape to secure wire nuts. **NO MORE THAN 5 - WIRES PER WIRE NUT.** Sufficient quantities of jumper wires and wire nuts are provided.

10 Connect white arm wires to neutral column wire (ribbed or marked is neutral). Connect black arm wires to power wire in column. Carefully press wires as close as possible to the underside of washer. Slide metal canopy with insulation pad to washer, attach with capnuts to threaded studs. Install 5 - bulbs and attach glass assembly with rosette and round nut provided.

11 Install bobeches and bulbs, connect power and test the fixture BEFORE trimming. If any of the bulbs do NOT light - **DISCONNECT POWER.** Double check the wire connections.

Instructions for crystal trimming STEPS 12 - 27

- 12** Hook Crystal "A" into bracket on upper column bobèche.
- 13** Hook Crystal "B" into the inside ring on glass scroll.
- 14** Hook Crystal "C" into the outside ring on glass scroll. Hook Chain "D" into the loops on Crystal "C". Chain "D" are swagged between Crystal "C".
- 15** Hook Chain "E" into every other ring on the center column bobèche. Hook other end into the back tab under bobèche on upper arm.
- 16** Hook Crystal "F" into every other ring on the center column bobèche. Crystal "F" hangs between two upper arm.
- 17** Screw Crystal Ball "H" onto the bottom of chandelier. Tighten setscrew with allen wrench provided to lock ball into position.
- 18** Hook Crystal Chain "J" (large crystal at top) into ring on the large lower body bobèche. Hook other end of Crystal Chain "J" (small crystal at bottom) into the lower column washer.
- 19** Hook Crystal "A1" into rings on the lower column bobèche.
- 20** Hook Crystal "G" into front tab under upper arm bobèche.
- 21** Hook Crystal "L1" into loops on the large lower body bobèche.
- 22** Hook Crystal "K", "L2" & "M" of each into rings on middle arm.
- 23** Hook Crystal "N" into front tab under middle arm bobèche.
- 24** Hook Crystal "O", "P1", "Q" & "R" of each into the rings on lower arm.
- 25** Hook Crystal "S" into front tab under lower arm bobèche.
- 26** Hook Crystal Chain "T" into side tab under lower arm bobèche. Hook other end of Chain "T" into side tab under middle arm bobèche. **NOTE: Crystal Chain "T" swags between lower and middle arms.**
- 27** Every bobèche is trimmed with Crystal "A", one suspended from every bracket.

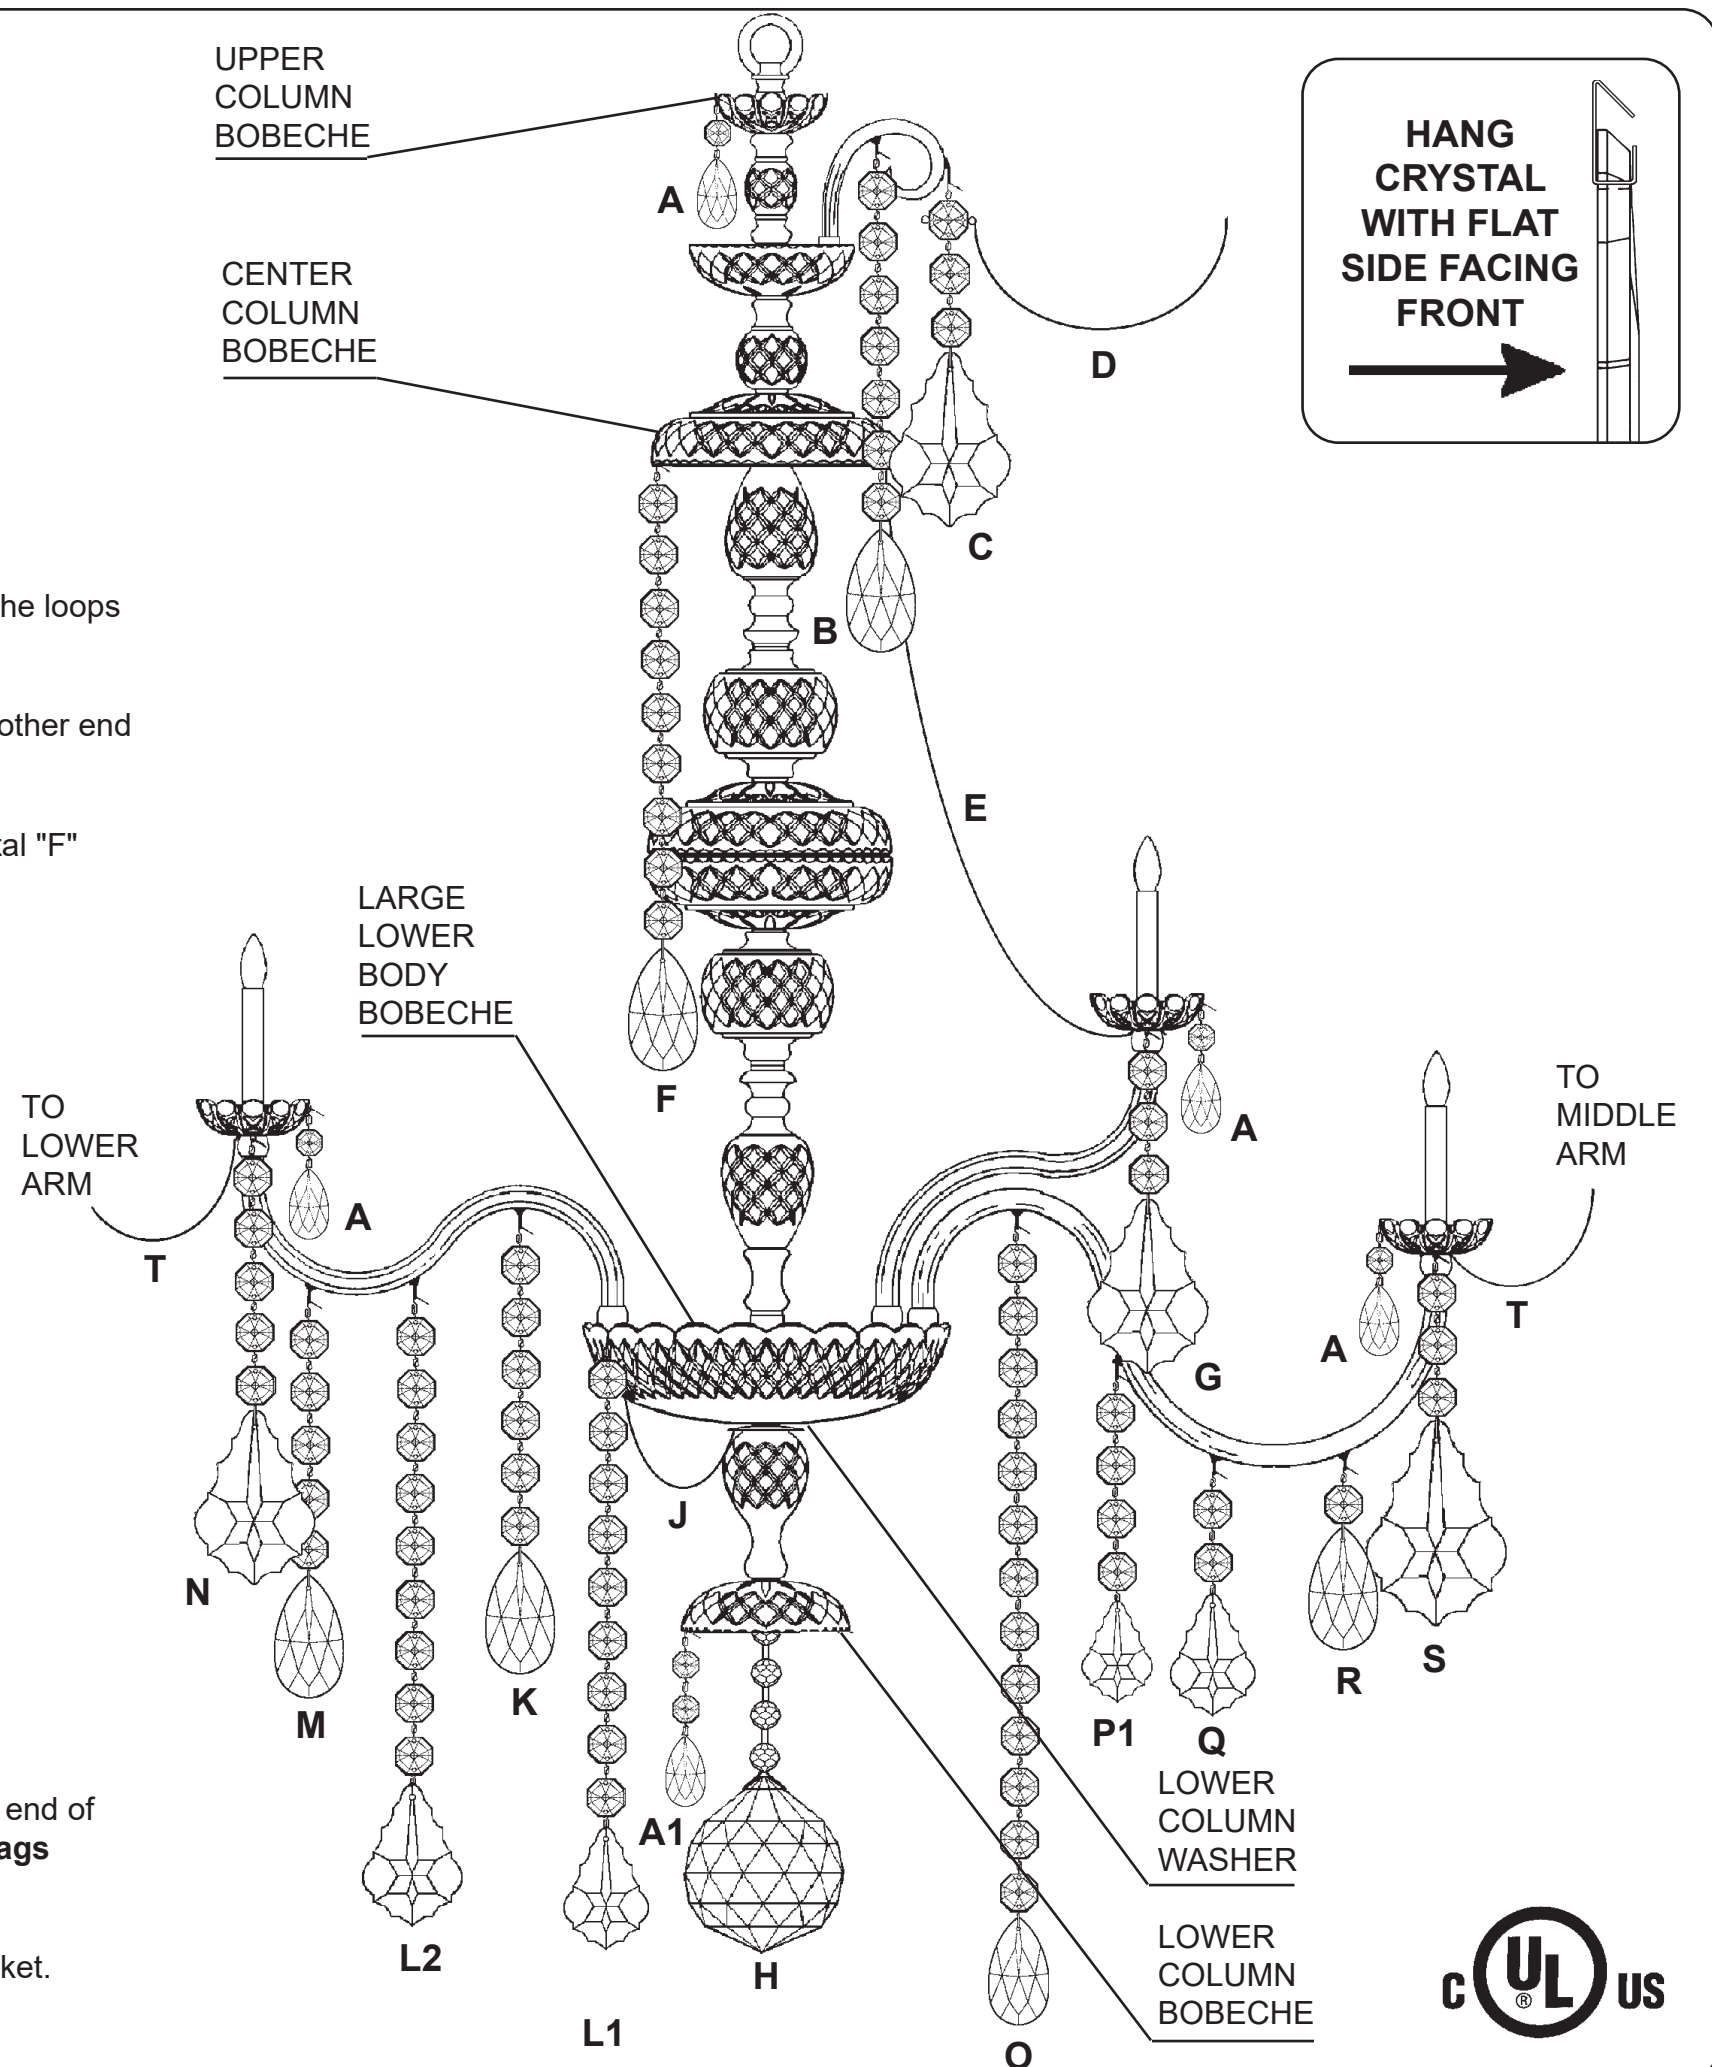



CHANDELIER 6861-___S TRIM DIAGRAM

(Finish Option)



THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF W SCHONBEK LLC.

40 + 5 Lights
Diameter: 60"
Body Length: 77"



CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 200 pounds.

BULBS: (5) Candle shaped candelabra base B8 bulbs, recommend 25 watts for best appearance.

(40) Candle shaped candelabra base B10 bulbs, recommend 25 watts for best appearance.

60 - Watts Maximum


WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

**Follow steps in exact order
Save this trim diagram for future reference**

1 **IMPORTANT**
Please record the following information for future service.

CODE	#	_____	Four-digit number on outside of carton.
PACKER	#	_____	See crystal package label.
ORDER	#	_____	See crystal package label.

Instructions for electrician STEPS 2 - 7

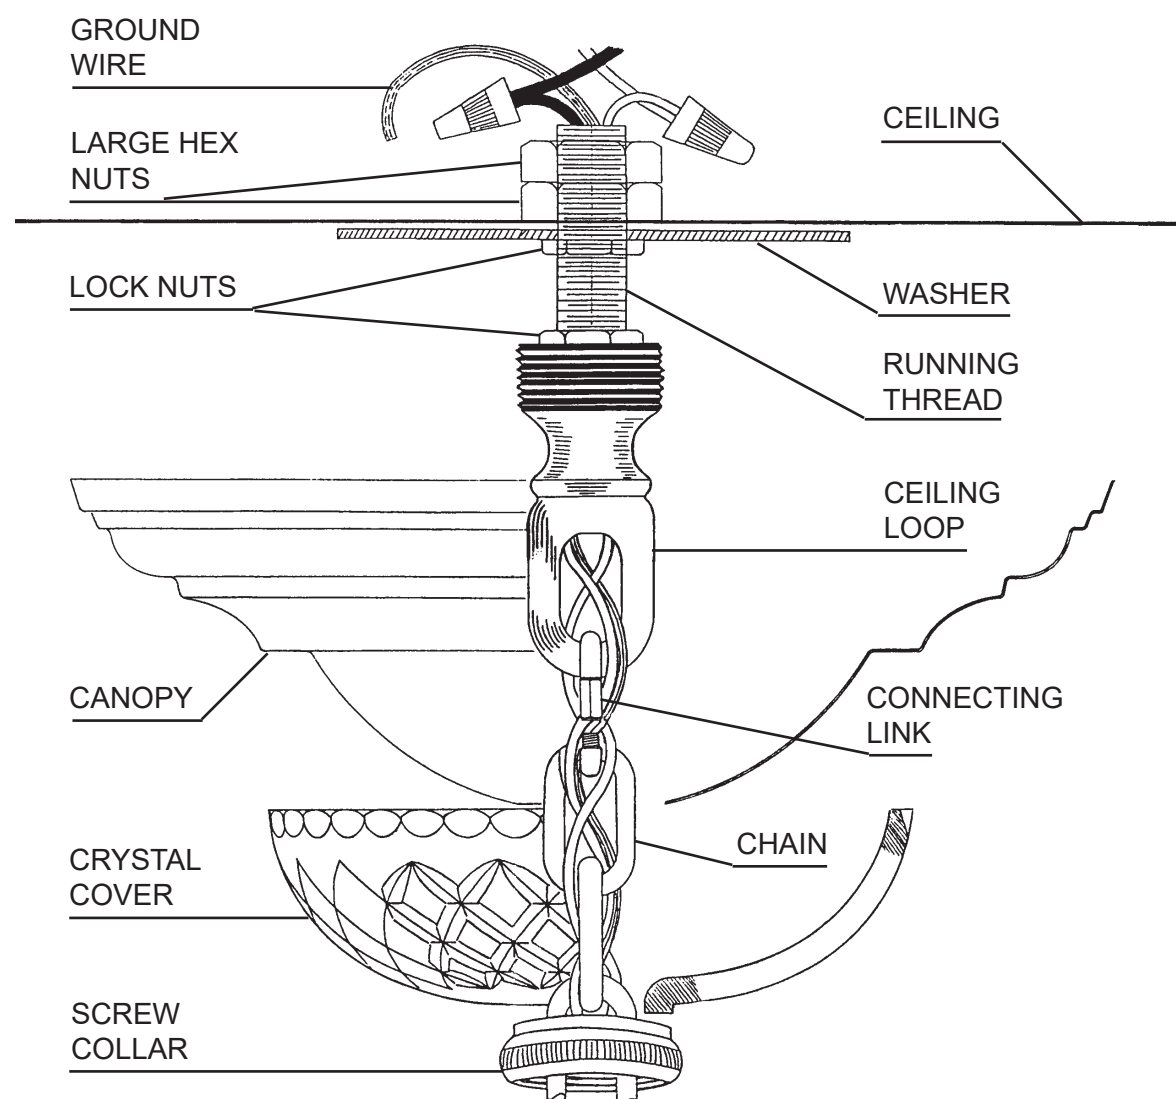

2 MAKE SURE POWER IS DISCONNECTED!!

3 Attach washer to supporting member in ceiling sufficient to support weight of fixture.

4 Slip screw collar, crystal cover and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.


5 Insert stem wire through chain and ceiling loop. Connect wires. Fixture **MUST** be grounded.

6 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

7 Attach canopy to ceiling with screw collar.

FRAGILE:

CAUTION: Glass parts are fragile. To avoid breakage use care when assembling or cleaning.

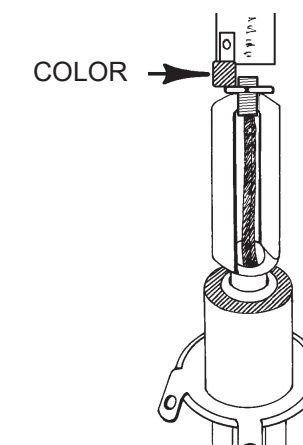

WHEN ORDERING REPLACEMENT ARM(S):

- | Give arm number from trim diagram
- | Give color code from the arm itself

MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS, ABRASIVES OR AEROSOL SPRAYS BE USED.


While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate jewelry... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

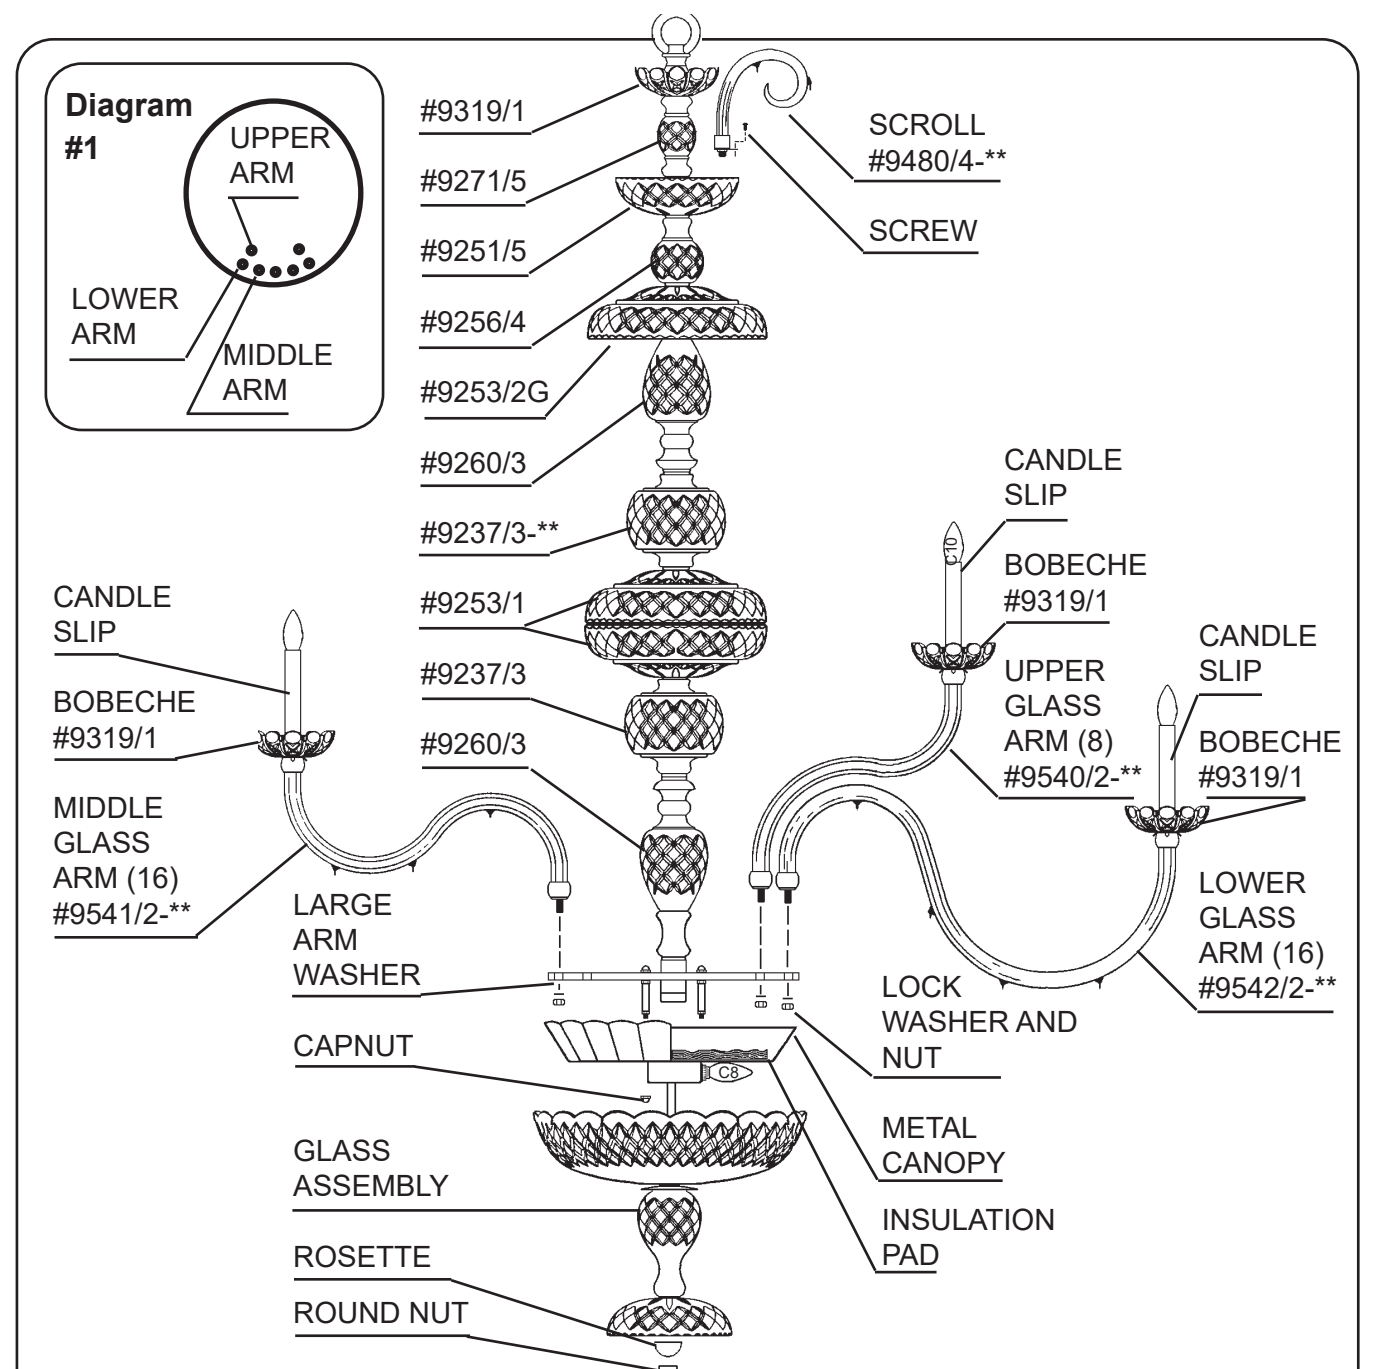

8 Install scrolls into washer with screws provided. Install arms into large arm washer. Line up holes in arms with dimple in washer. Use lock washer and nut to secure arms in place. **NOTE: Place 8 upper arms into inside diameter holes and ALTERNATE 16 middle and lower arms in outside diameter holes. For best appearance line-up lower arms with upper arms. See Diagram #1.**

9 Connect bare ground wires in each arm to bare ground wire in center column. Use electrical tape to secure wire nuts. **NO MORE THAN 5 - WIRES PER WIRE NUT.** Sufficient quantities of jumper wires and wire nuts are provided.

10 Connect white arm wires to neutral column wire (ribbed or marked is neutral). Connect black arm wires to power wire in column. Carefully press wires as close as possible to the underside of washer. Slide metal canopy with insulation pad to washer, attach with capnuts to threaded studs. Install 5 - bulbs and attach glass assembly with rosette and round nut provided.

11 Install bobeches and bulbs, connect power and test the fixture BEFORE trimming. If any of the bulbs do NOT light - **DISCONNECT POWER.** Double check the wire connections.

Instructions for crystal trimming STEPS 12 - 27

- 12** Hook Crystal "A" into bracket on upper column bobèche.
- 13** Hook Crystal "B" into the inside ring on glass scroll.
- 14** Hook Crystal "C" into the outside ring on glass scroll. Hook Chain "D" into the loops on Crystal "C". Chain "D" are swagged between Crystal "C".
- 15** Hook Chain "E" into every other ring on the center column bobèche. Hook other end into the back tab under bobèche on upper arm.
- 16** Hook Crystal "F" into every other ring on the center column bobèche. Crystal "F" hangs between two upper arm.
- 17** Screw Crystal Ball "H" onto the bottom of chandelier. Tighten setscrew with allen wrench provided to lock ball into position.
- 18** Hook Crystal Chain "J" (large crystal at top) into ring on the large lower body bobèche. Hook other end of Crystal Chain "J" (small crystal at bottom) into the lower column washer.
- 19** Hook Crystal "A1" into rings on the lower column bobèche.
- 20** Hook Crystal "G" into front tab under upper arm bobèche.
- 21** Hook Crystal "L1" into loops on the large lower body bobèche.
- 22** Hook Crystal "K", "L2" & "M" of each into rings on middle arm.
- 23** Hook Crystal "N" into front tab under middle arm bobèche.
- 24** Hook Crystal "O", "P1", "Q" & "R" of each into the rings on lower arm.
- 25** Hook Crystal "S" into front tab under lower arm bobèche.
- 26** Hook Crystal Chain "T" into side tab under lower arm bobèche. Hook other end of Chain "T" into side tab under middle arm bobèche. **NOTE: Crystal Chain "T" swags between lower and middle arms.**
- 27** Every bobèche is trimmed with Crystal "A", one suspended from every bracket.

