SCHONBEK 1870

SARELLA RS84151N- __ __H

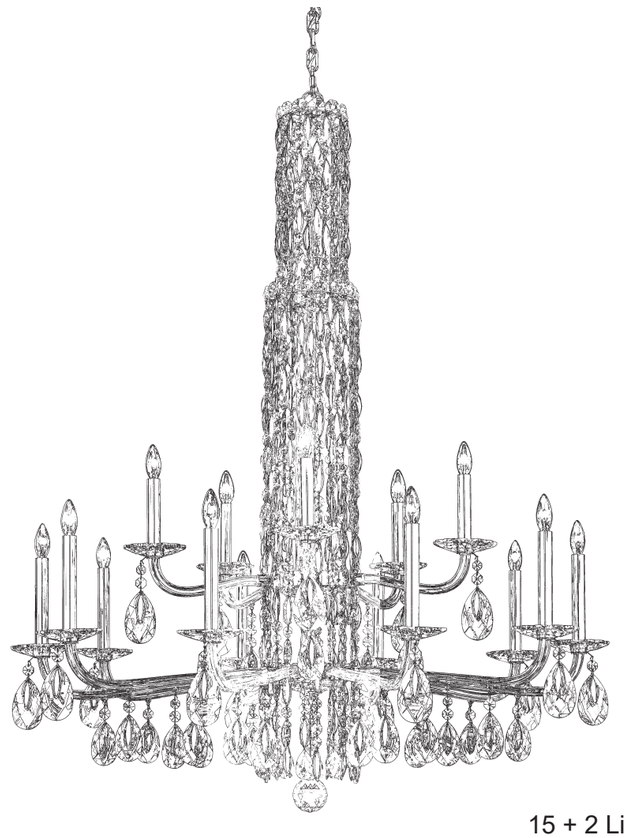

15 + 2 Lights
Diameter: 40-1/2"
Height: 50-1/2"
Hanging Weight: 44lbs.

THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
W SCHONBEK LLC.

SCHONBEK 1870

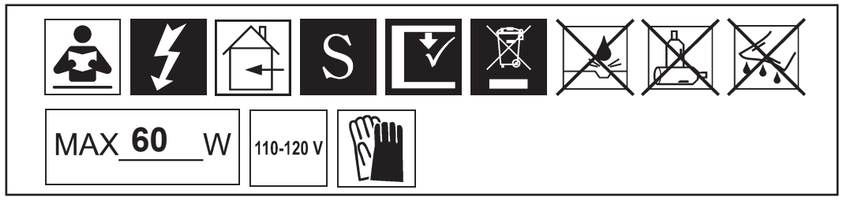

WARNING:

1

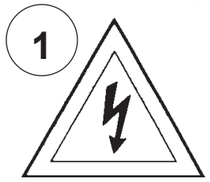

Electrical Danger

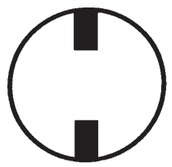

Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

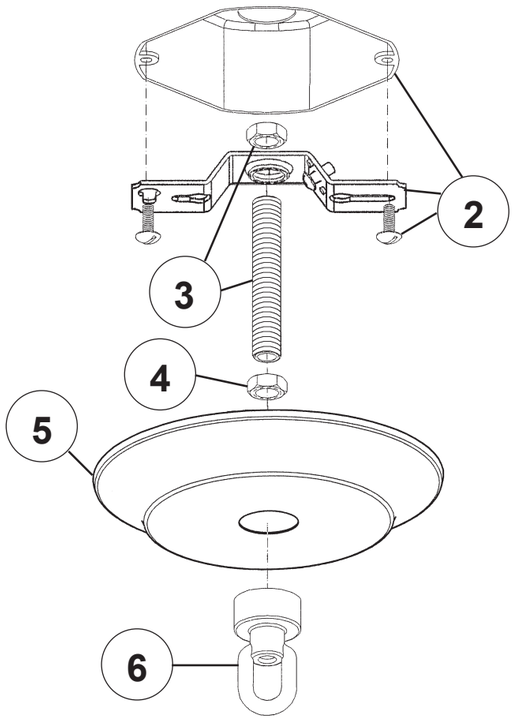

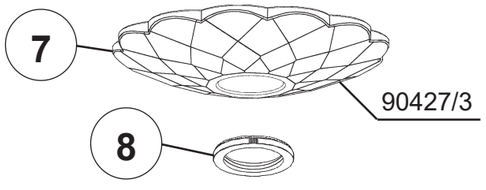

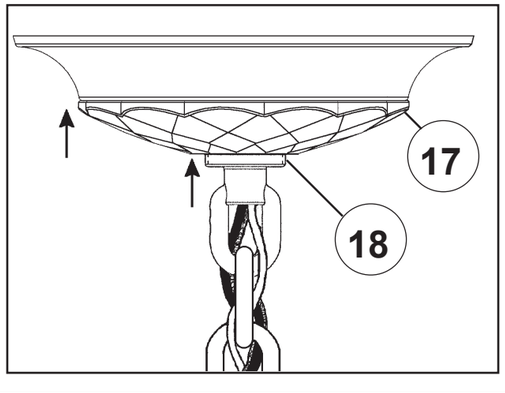

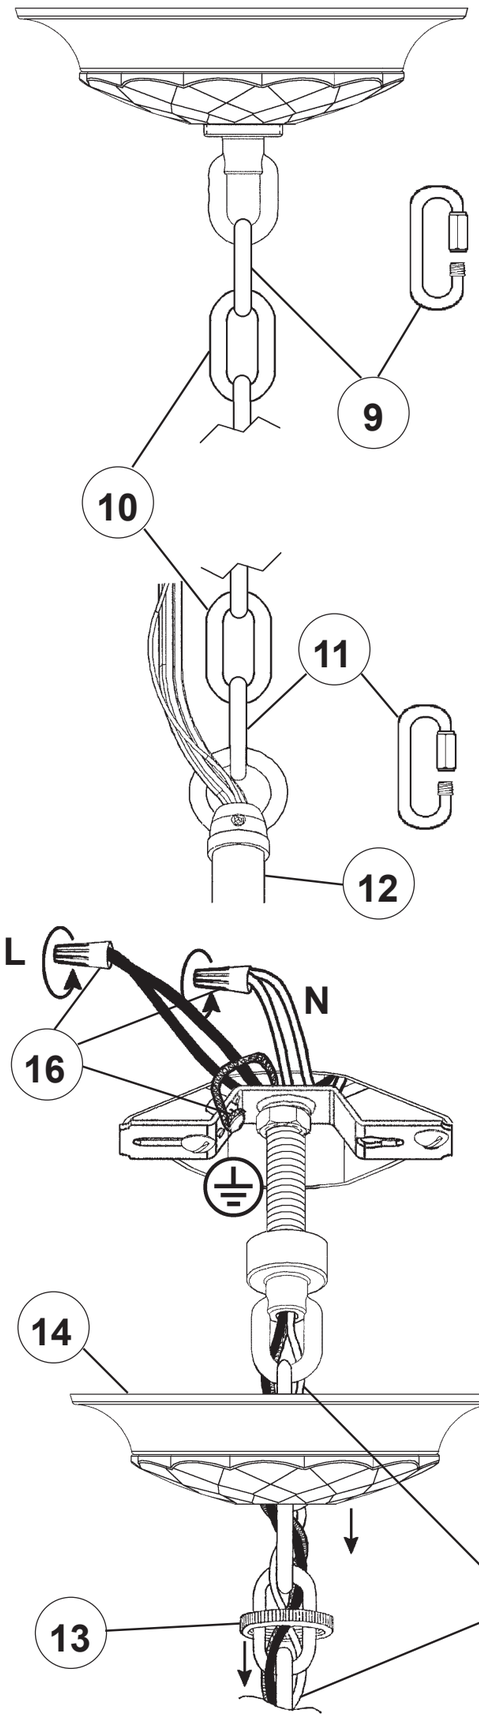

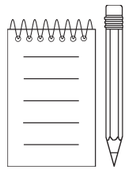

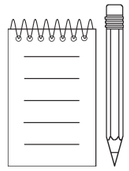

21

You will need 17 - B10
25 Watts Recommended
60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

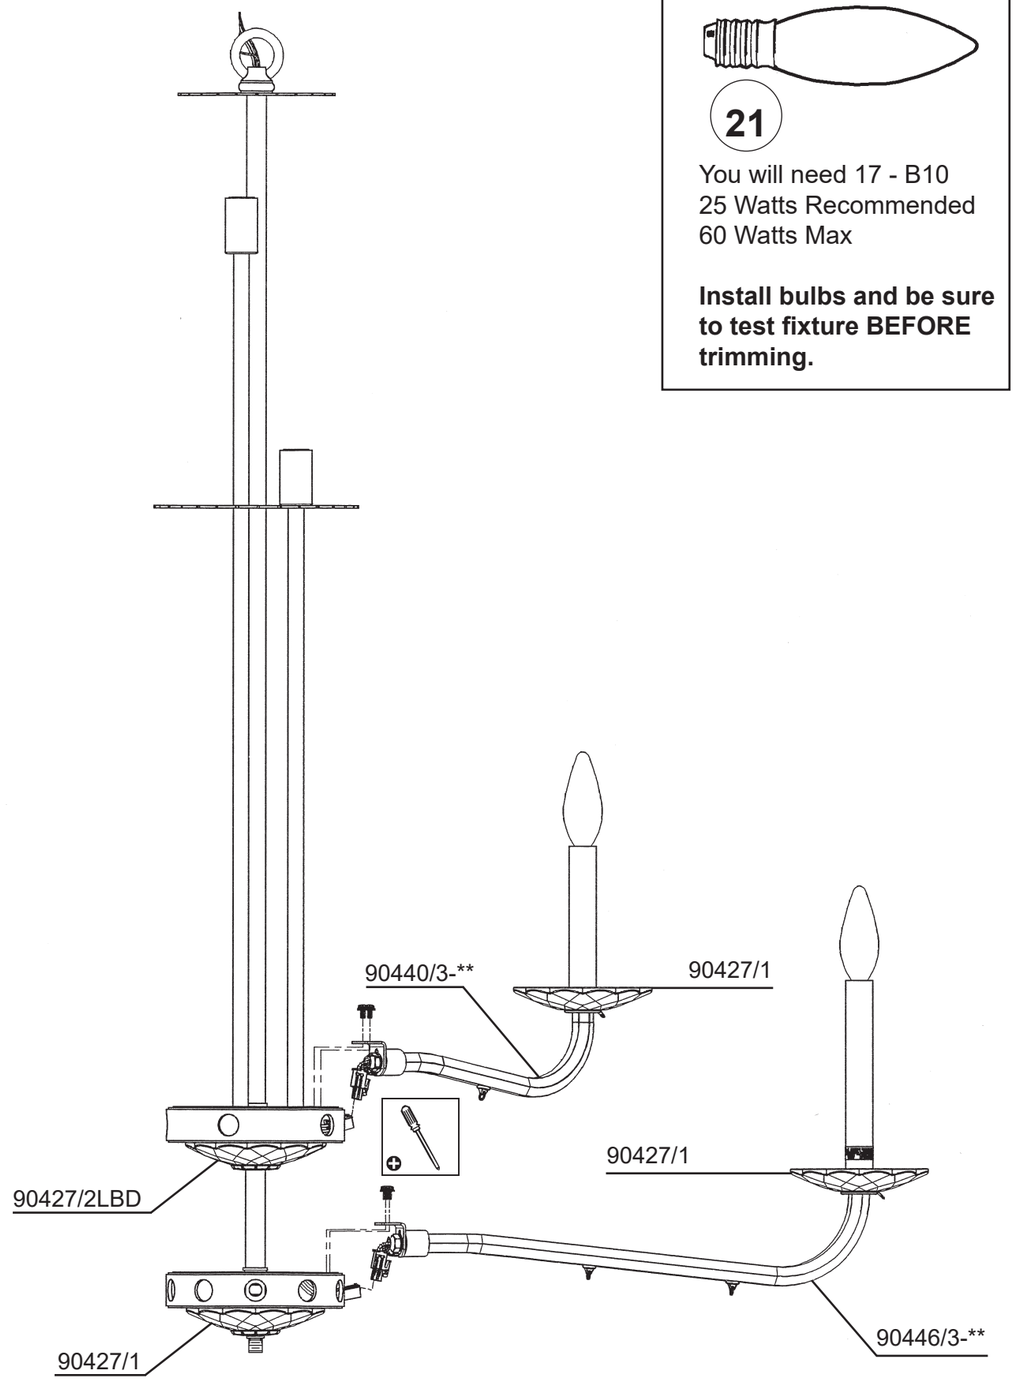

19 Connect arm wires using plug-in connectors. See detailed illustration.



20 Push wires into hole and attach arm into place by tightening screws.

21 Install bobeche on every arm and screw bulbs into all sockets and test fixture before trimming. If any of the bulbs do NOT light - DISCONNECT POWER. Double check the wire connections.

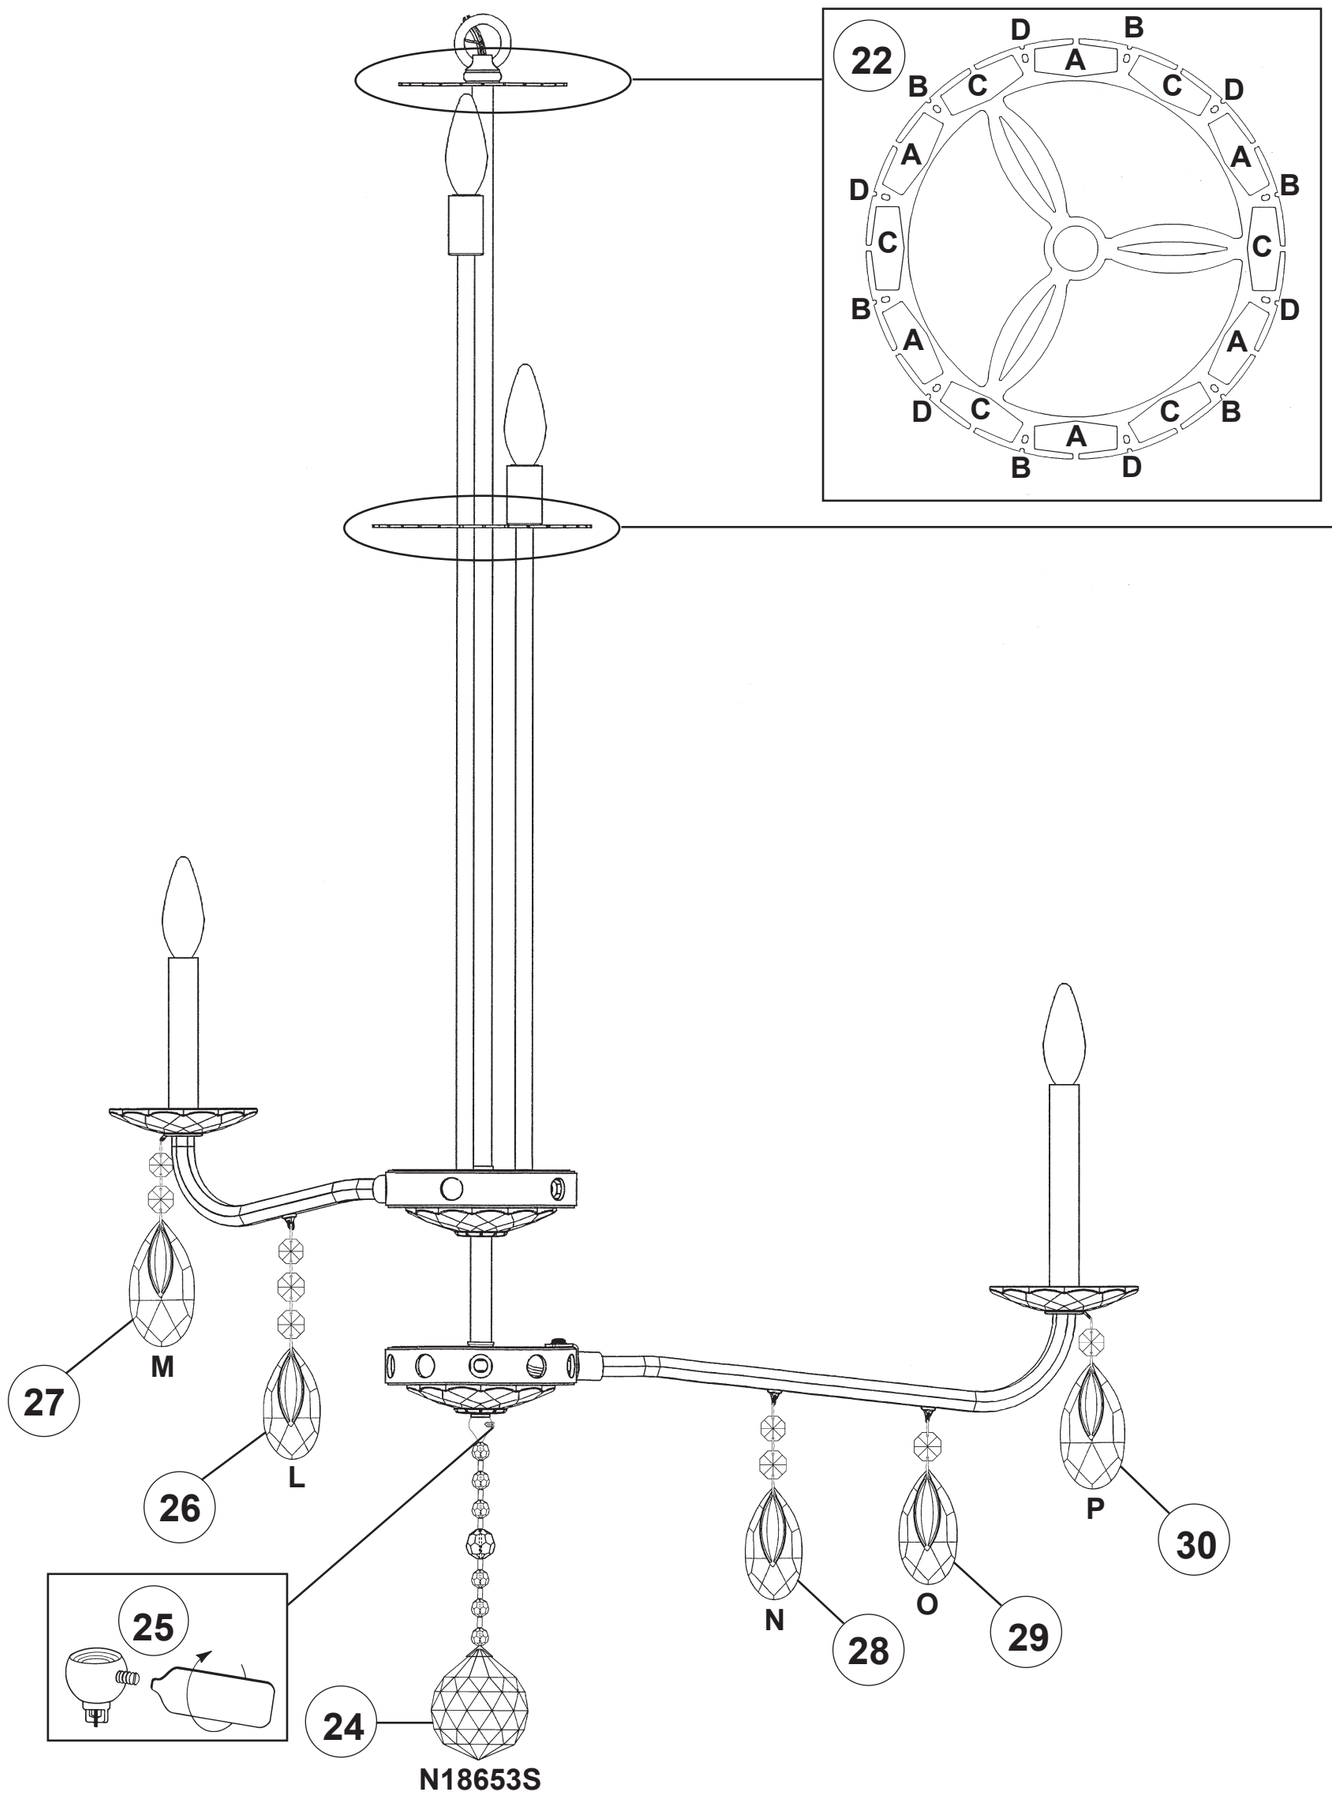
22
A
B
C
D
23
E
F
G
H
J
K
25
24
N18653S
M
L
N
O
P
27
26
28
29
30

SCHONBEK 1870

SARELLA RS84151N- __ __R

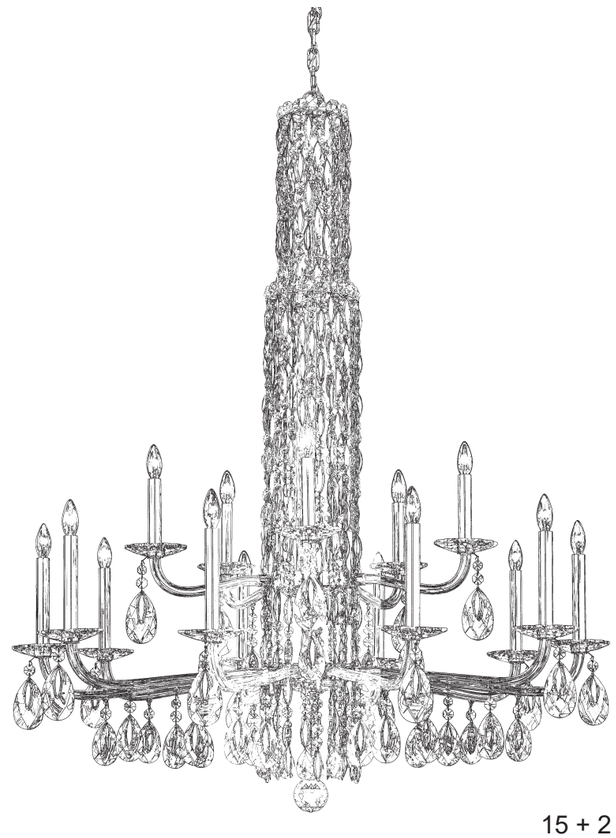

15 + 2 Lights
Diameter: 40-1/2"
Height: 50-1/2"
Hanging Weight: 44lbs.

THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
W SCHONBEK LLC.

SCHONBEK 1870

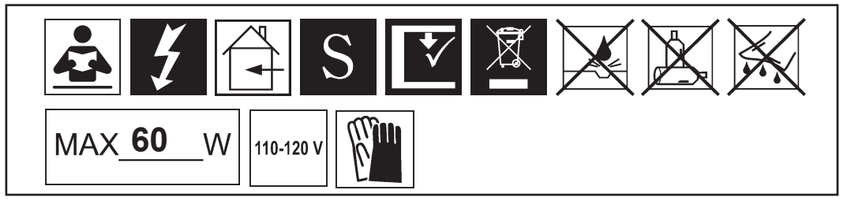

WARNING:

1

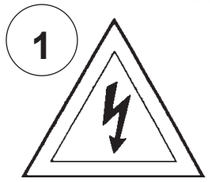

Electrical Danger

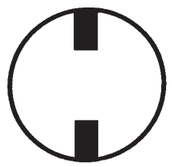

Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

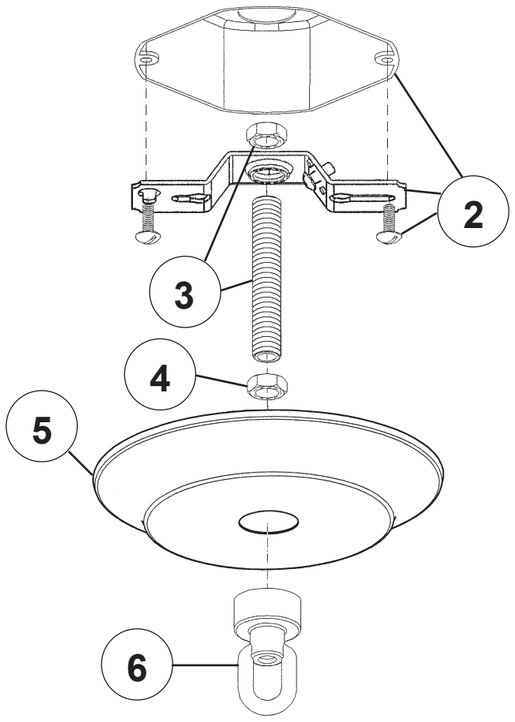

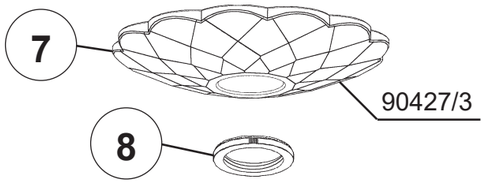

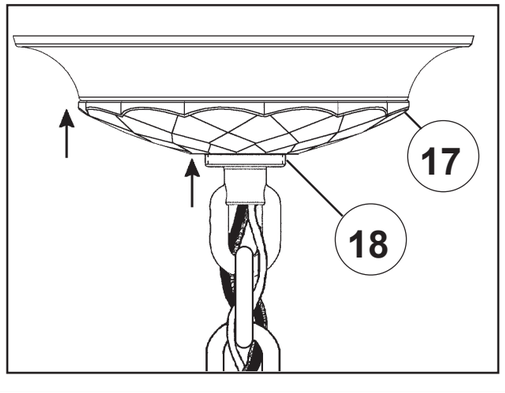

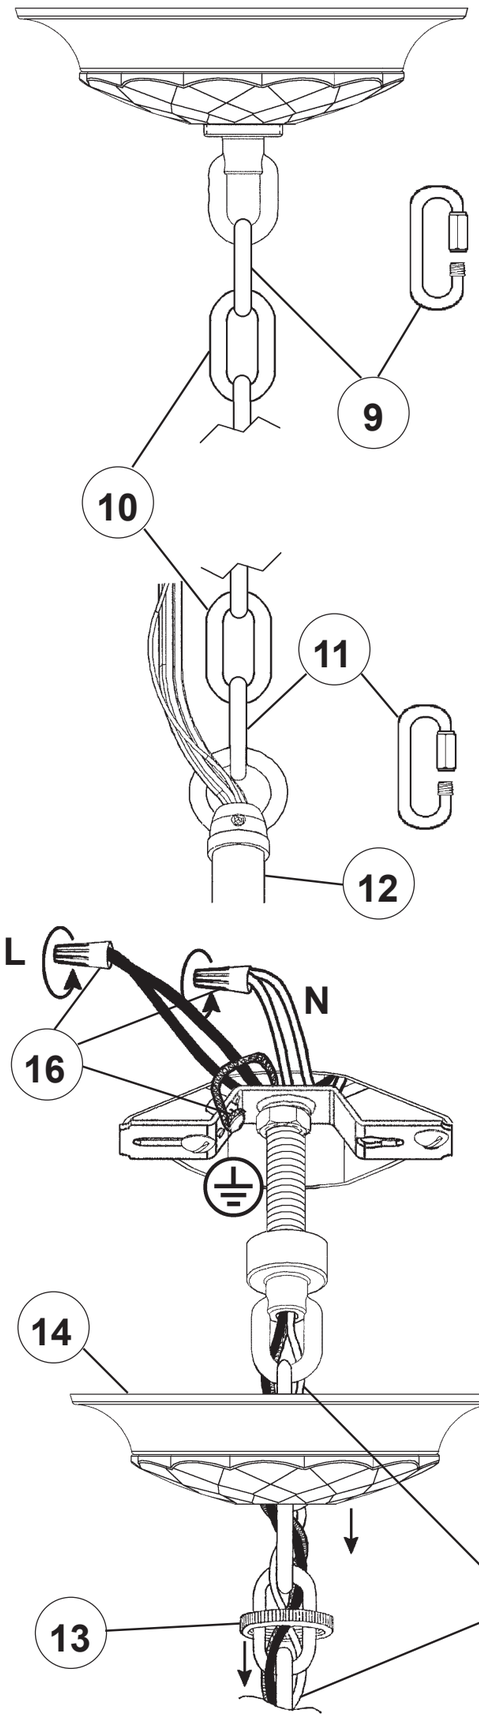

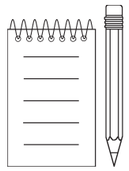

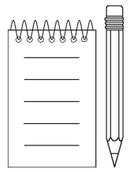

21

You will need 17 - B10
25 Watts Recommended
60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

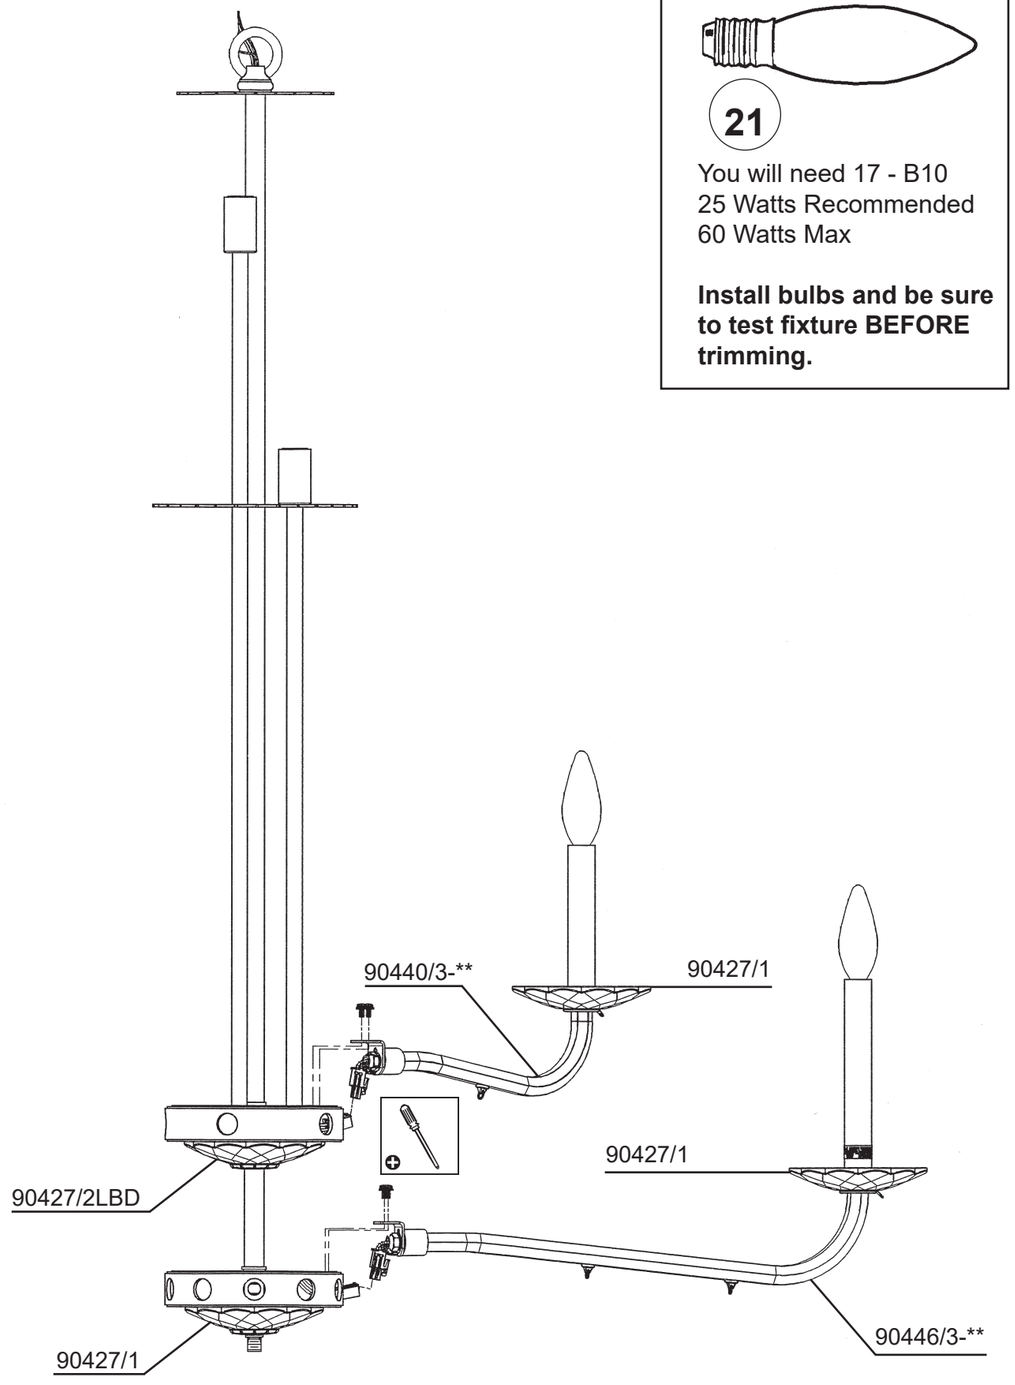

19 Connect arm wires using plug-in connectors. See detailed illustration.



20 Push wires into hole and attach arm into place by tightening screws.

21 Install bobeche on every arm and screw bulbs into all sockets and test fixture before trimming. If any of the bulbs do NOT light - DISCONNECT POWER. Double check the wire connections.

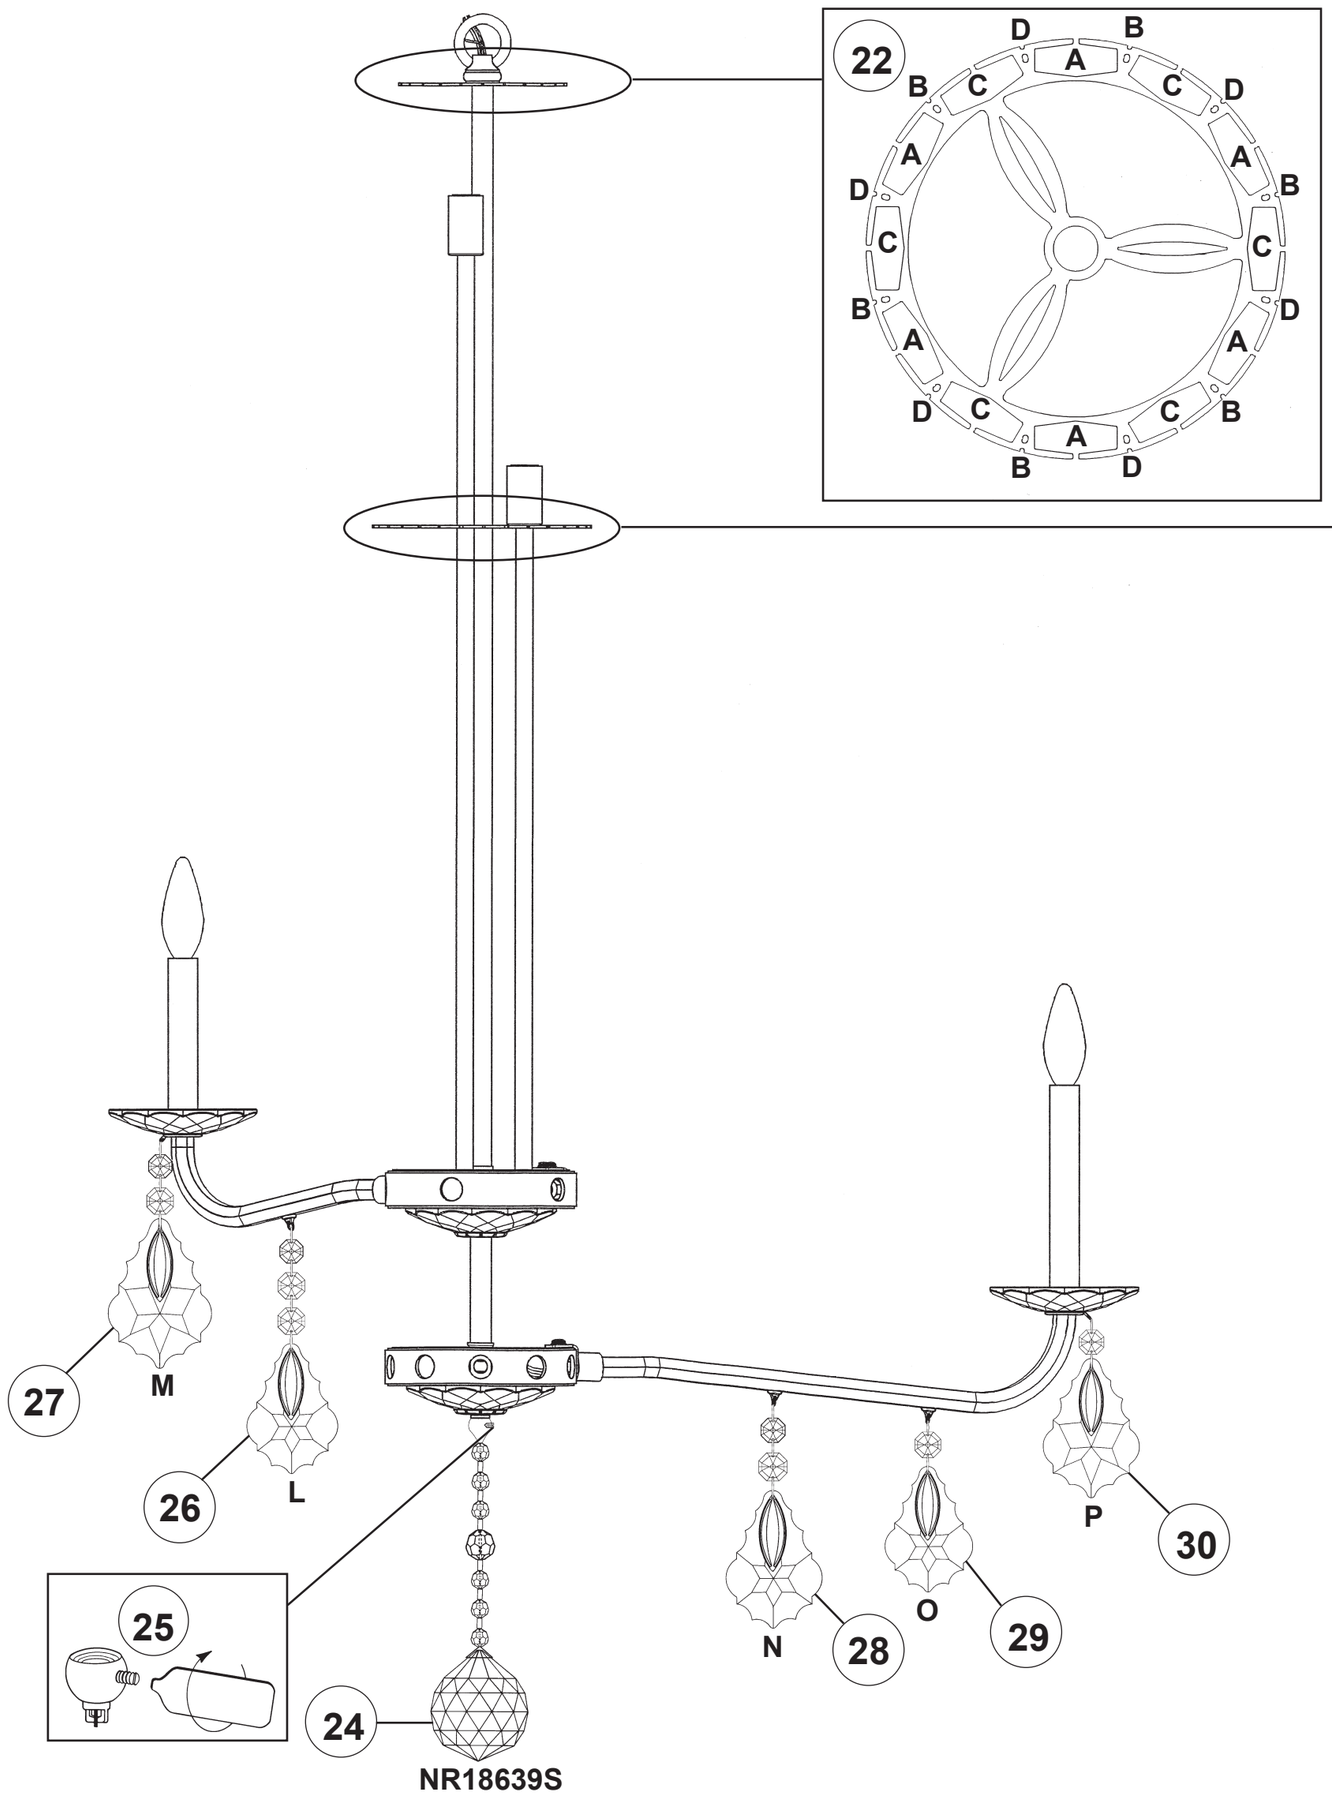

RS84151N-__ __R

SCHONBEK 1870

SARELLA RS84151N- __ __S

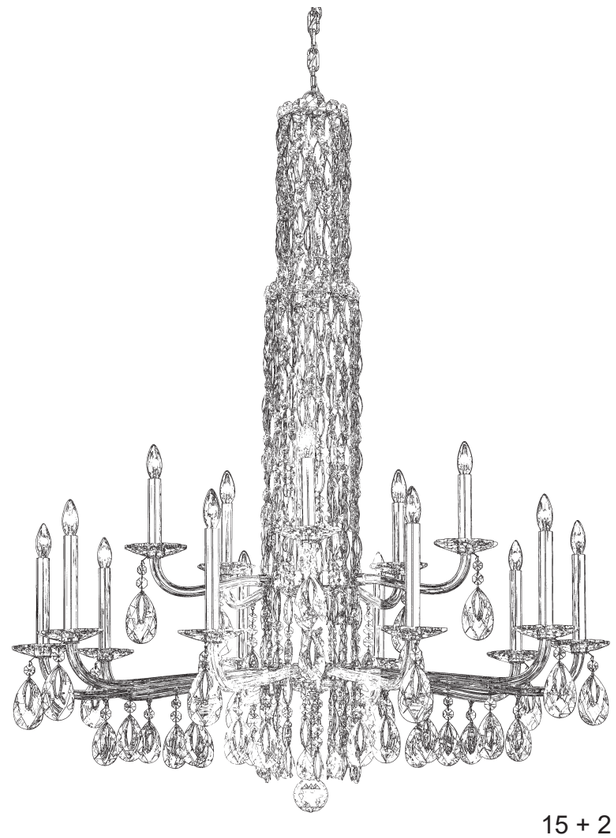

15 + 2 Lights
Diameter: 40-1/2"
Height: 50-1/2"
Hanging Weight: 44lbs.

THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
W SCHONBEK LLC.

SCHONBEK 1870

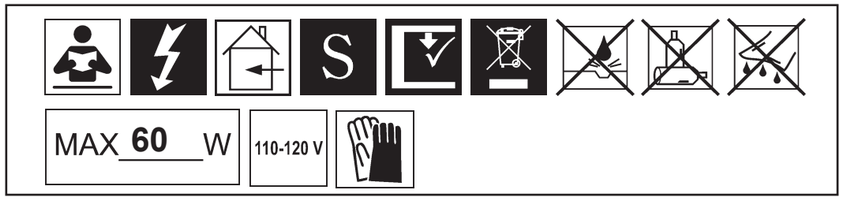

WARNING:

1

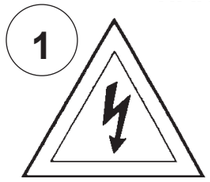

Electrical Danger

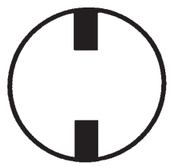

Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

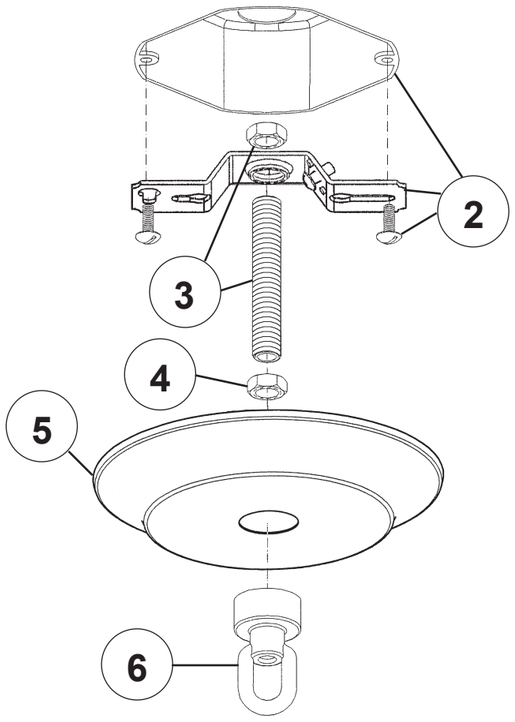

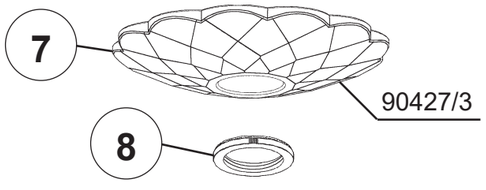

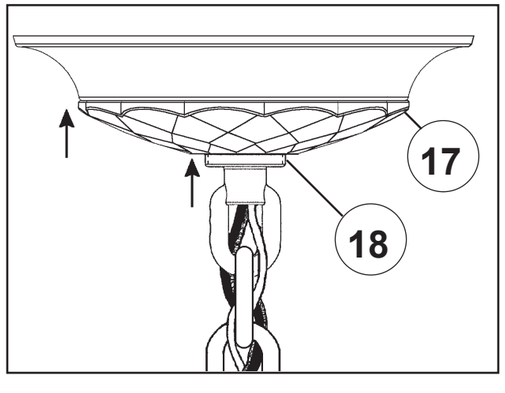

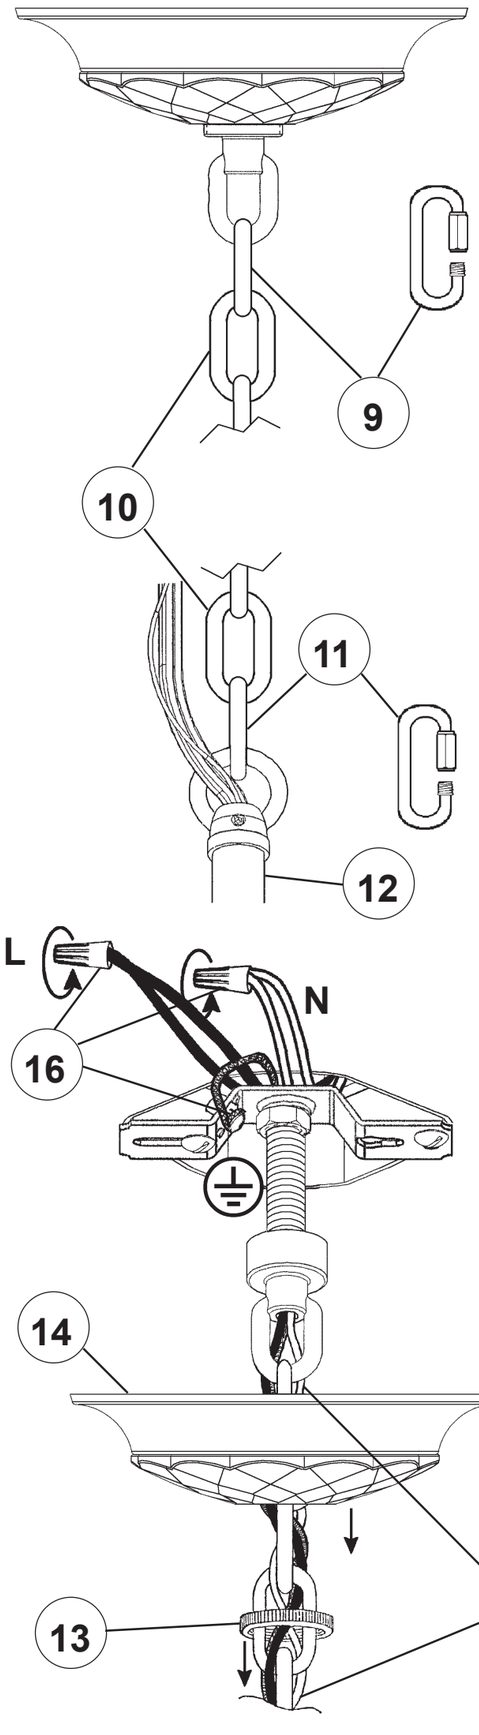

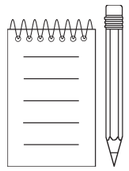

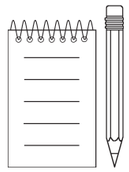

21

You will need 17 - B10
25 Watts Recommended
60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

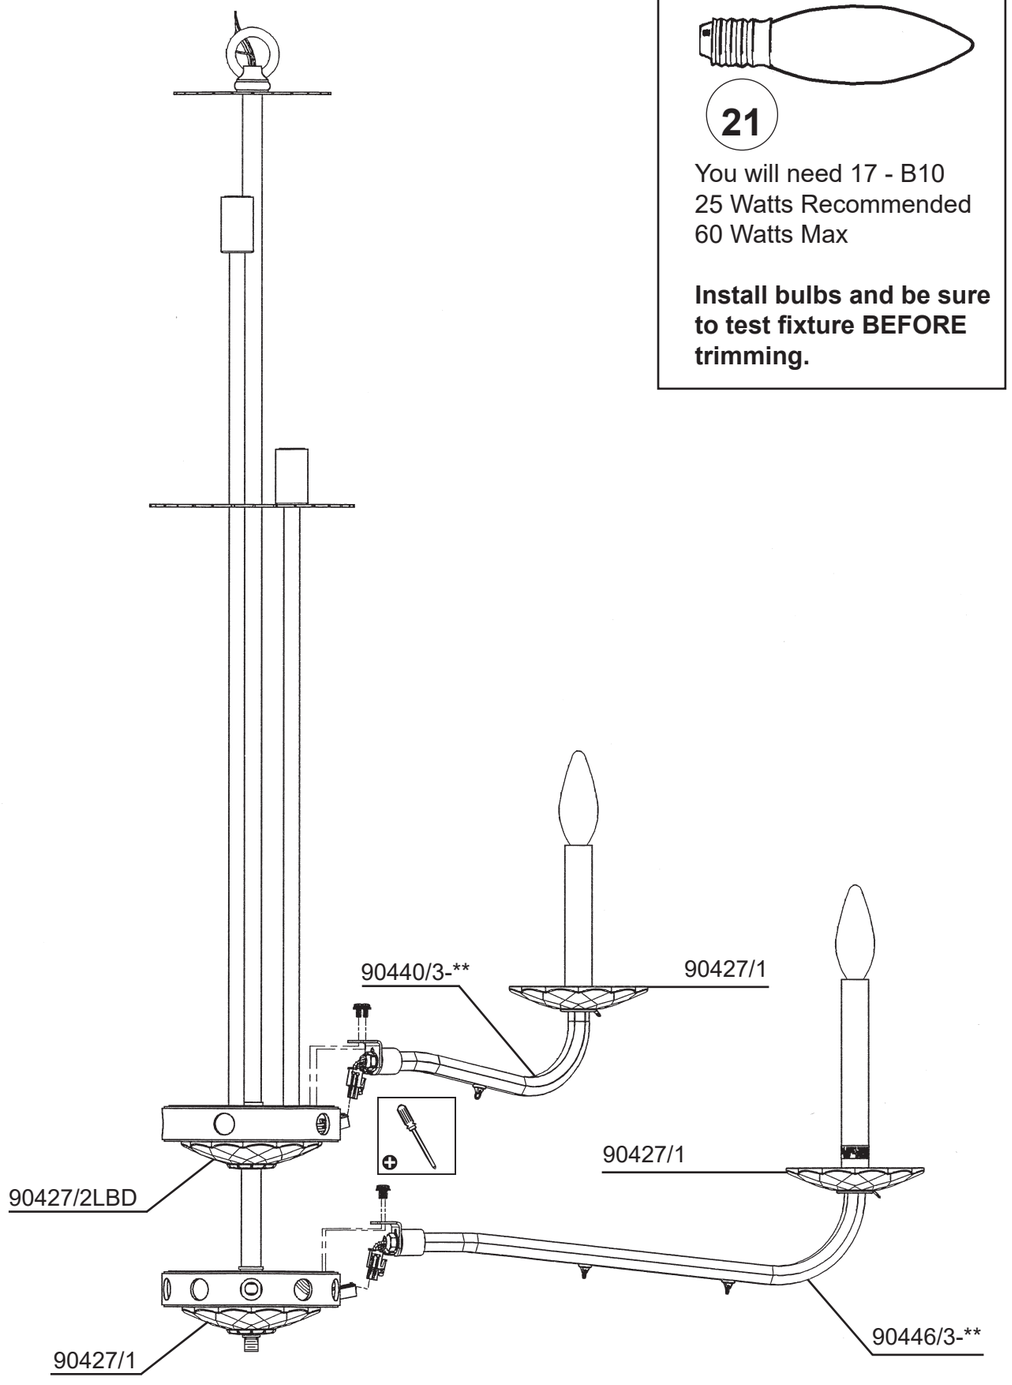

19 Connect arm wires using plug-in connectors. See detailed illustration.



20 Push wires into hole and attach arm into place by tightening screws.

21 Install bobeche on every arm and screw bulbs into all sockets and test fixture before trimming. If any of the bulbs do NOT light - DISCONNECT POWER. Double check the wire connections.

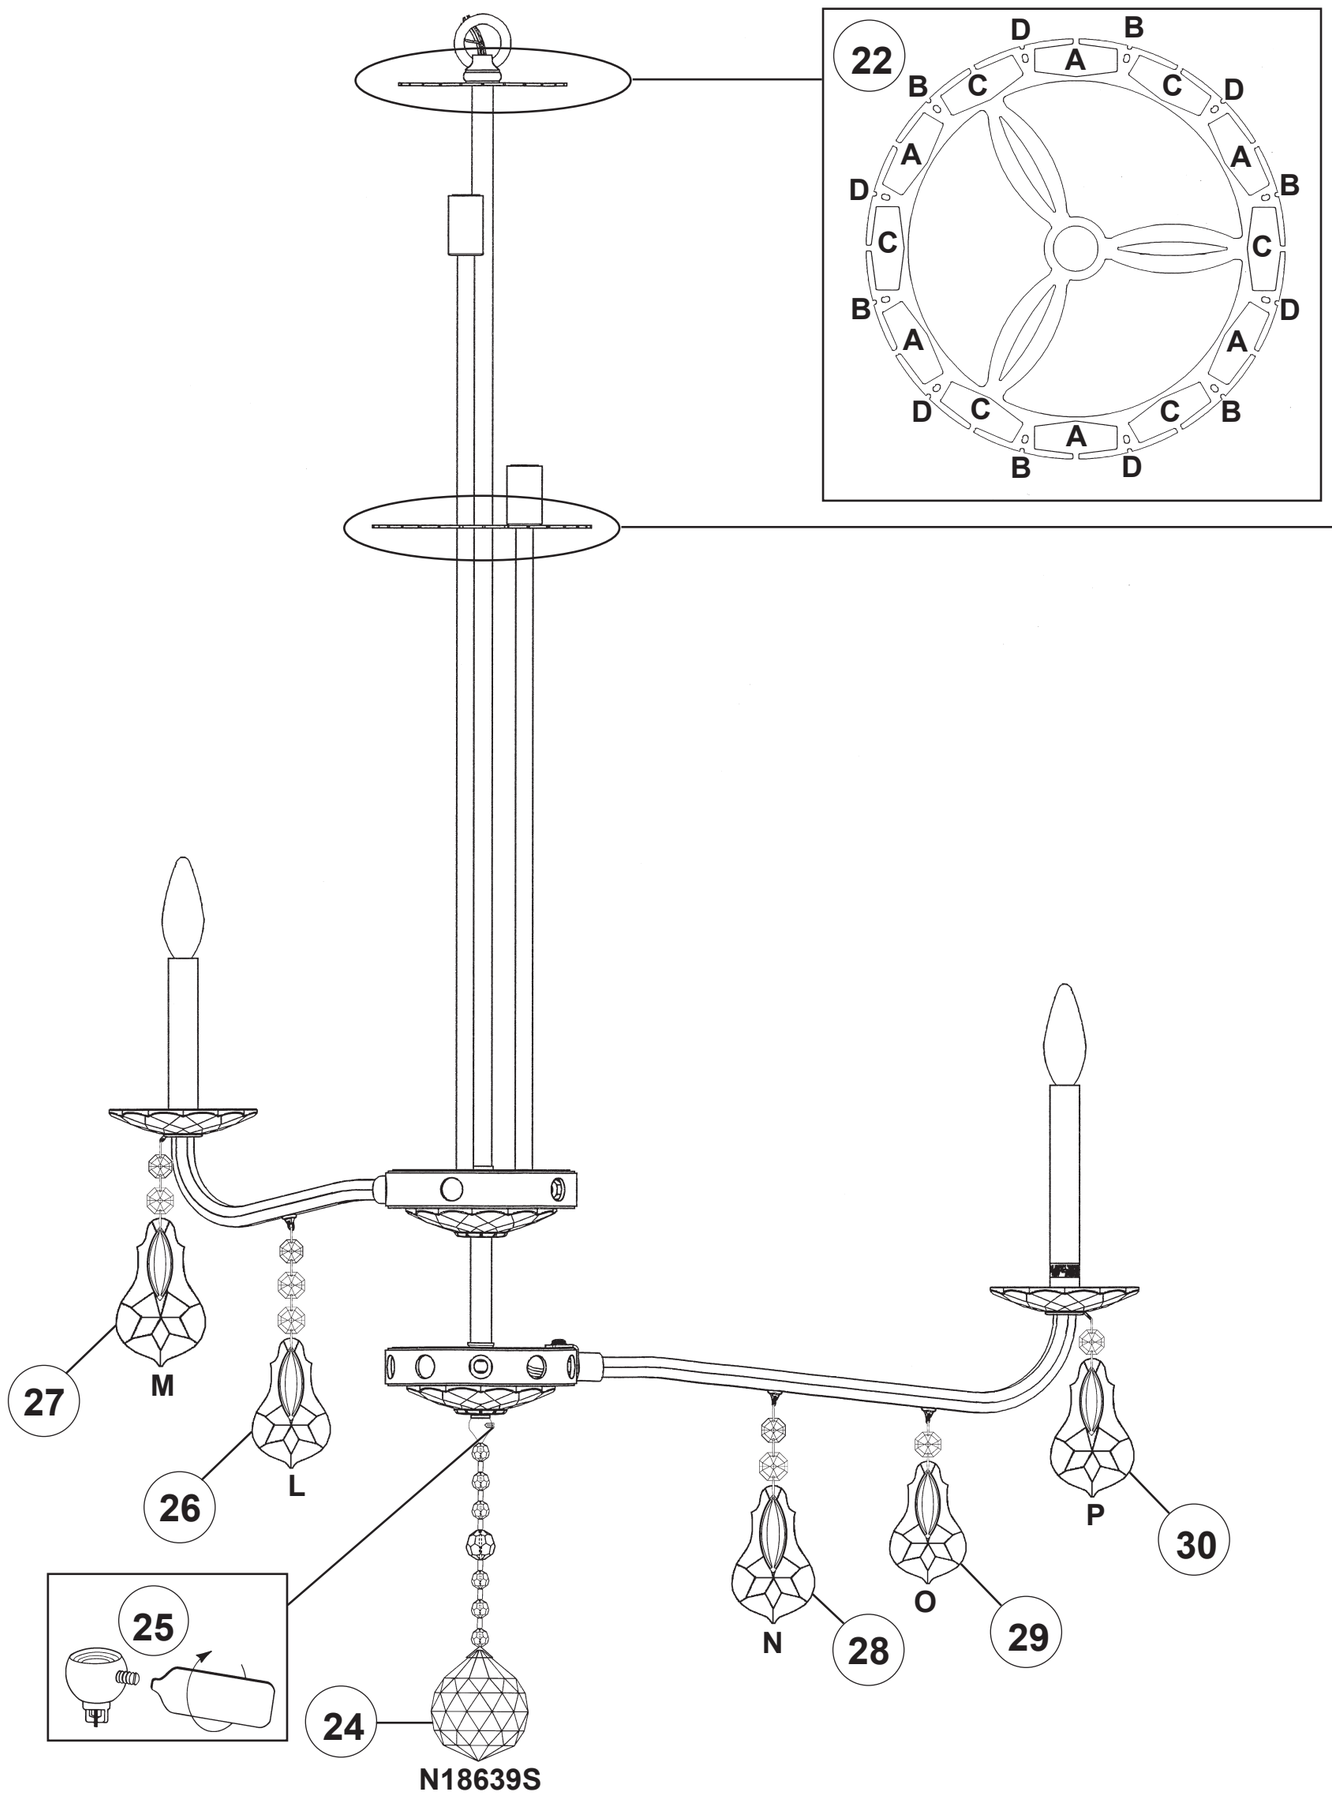
22
A
B
C
D
23
E
F
G
H
J
K
25
24
N18639S
26
L
27
M
28
N
29
O
30
P